- (2) Manual print stopping procedure
 - 1 Press the "PRINT" key.
 - ② Use the "PRINT" key to display " , and press the "ENT" key.
 - ③ Use the "PRINT" key to select "与上口P". Pressing the "ENT" key stops manual print.

However, print operation continues until the line is completed. Manual print is stopped.

And the display returned it was prior to starting manual print.

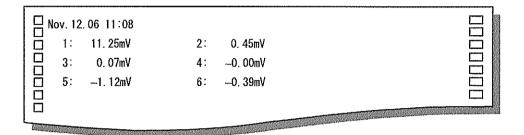


Fig. 6.3 Manual Print

6.4.2 List Print

Print the following setting data of the instrument on the paper:

Date/time/Chart speed/2nd chart speed/Printing cycle.

Channel number/range/scaling value/engineering unit

Setting alarm type

- (1) List print operating procedure
 - ① Press the "PRINT" key.
 - ② Use the "PRINT" key to display "LI 5L", and press the "ENT" key.
 - ③ Use the "PRINT" key to select "5LR-L". Pressing the "ENT" key executes list print.

Once list print starts, the display is automatically returned to the Data Display screen.

Upon termination of list print, it is returned to it was prior to starting list print.


[Note]

- ① Analog recording is interrupted while list print is running. However, measurement/alarm detection remains effective.
- ② If an alarm is activated while list print is running, alarm print will be performed when recording restarts.

- (2) List print stopping procedure
 - ① Press the "PRINT" key.
 - ② Use the "PRINT" key to display "LI 5L", and press the "ENT" key.
 - ③ Use the "PRINT" key to select "与上□P" . Pressing the "ENT" key stops list print.

However, print operation continues until the line is completed. List print is stopped.

And the display returned to it was prior to starting list print.

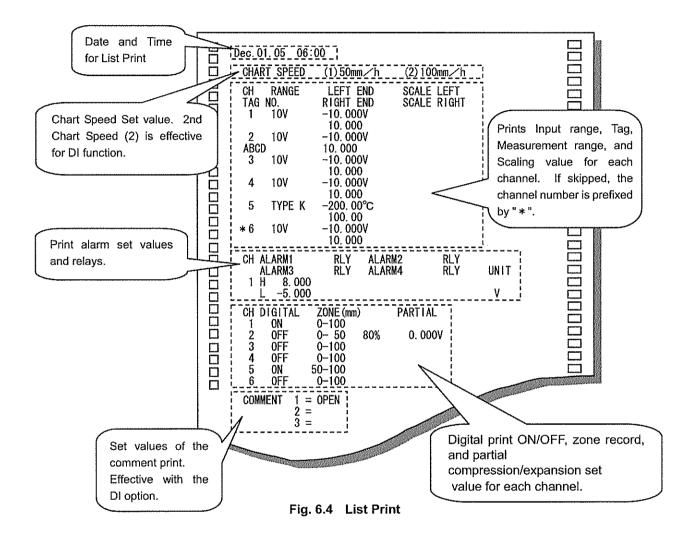

6.4.3 Engineering List Print

Engineering list print provides the following setting data of the instrument on the chart paper.

Analog recording

Digital printing

Burnout/RJC etc.

- (1) Engineering list print operating procedure
 - ① Press the "MENU" key.
 - ② Use the "PRINT" key to display "ELI 5L", and press the "ENT" key.
 - ③ Use the "PRINT" key to select "**5上 Fr - :**". Pressing the "ENT" key executes engineering list print.

Once engineering list print starts, the display is automatically returned to the Data Display screen.

Upon termination of engineering list print, it is returned to it was prior to starting engineering list print.

[Note]

- ① Analog recording is interrupted while engineering list print is running. However, measurement/alarm detection remains effective.
- ② If an alarm is activated while engineering list print is running, alarm print will be performed when recording restarts.

- (2) Engineering list print stopping procedure
 - 1 Press the "MENU" key.
 - ② Use the "PRINT" key to display "ELI 5L", and press the "ENT" key.
- ③ Use the "PRINT" key to select "**与上由P**". Pressing the "ENT" key stops engineering list print. However, print operation continues until the line is completed.

Engineering list print stopped. And the display returned to it was prior to starting engineering list print.

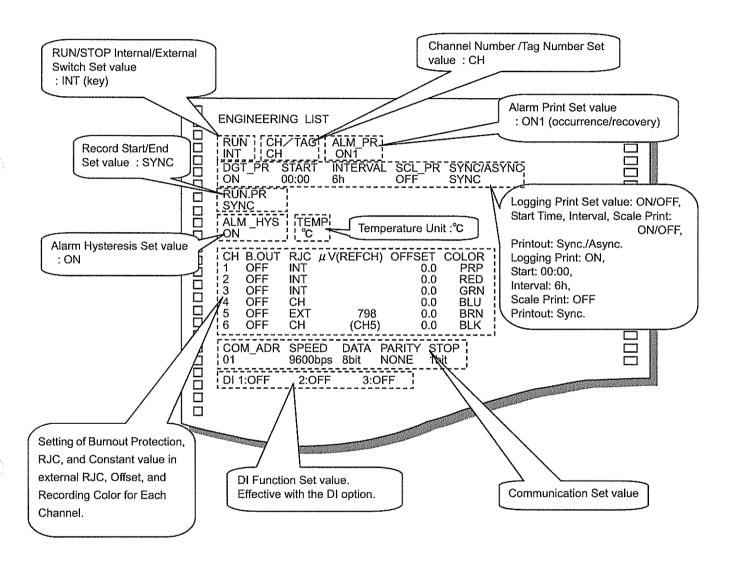


Fig. 6.5 Engineering List Print