



# Orion-M

## User Communications Reference Manual



## Safety Information in this Manual

Notes, cautions and warnings appear throughout this book to draw your attention to important operational and safety information.

A “**NOTE**” marks a short message to alert you to an important detail.

A “**CAUTION**” safety alert appears with information that is important for protecting your equipment and performance.

A “**WARNING**” safety alert appears with information that is important for protecting you, others and equipment from damage. Pay very close attention to all warnings that apply to your application.



This symbol (an exclamation point in a triangle) precedes a general CAUTION or WARNING statement.



This symbol (a lightning bolt in a lightning bolt in a triangle) precedes an electric shock hazard CAUTION or WARNING safety statement.

## Technical Assistance

If you encounter a problem with your Orion-M controller, review all of your configuration information to verify that your selections are consistent with your application: inputs; outputs; alarms; limits; etc. If the problem persists after checking the above, you can get technical assistance by dialing +1 (866) 342-5332 or by faxing your request to +1 (866) 332-8014, Monday thru Friday, 8:00 a.m. to 5:00 p.m. Eastern Standard Time. You can also email your request to [support@futuredesigncontrols.com](mailto:support@futuredesigncontrols.com).

An applications engineer will discuss your application with you.

### **Please have the following information available:**

- Complete Model #'s and/or Serial #'s for Component(s) in Question
- Complete Software Version #'s
- All Configuration Information
- All User Manuals

**Warranty and return information is on the back cover of this manual.**

## Your Comments

Your comments or suggestions on this manual are welcome. Please send them to:  
Future Design Controls, P.O. Box 1196, Bridgeview, Illinois, 60455  
Telephone: +1 (888) 751-5444; fax: +1 (888) 307-8014  
[csr@futuredesigncontrols.com](mailto:csr@futuredesigncontrols.com)

The Orion-M User Communications Reference Manual is copyrighted by Future Design Controls, Inc., © 2009, all rights reserved (<http://www.futuredesigncontrols.com/Orion-M.htm>).

<b>1</b>	<b>What is the Orion-M?</b>	<b>1.1</b>
1.1	Features	1.1
<b>2</b>	<b>User Communications Card Installation</b>	<b>2.1</b>
2.1	Communications Card Wiring	2.2
<b>3</b>	<b>Communication Basics</b>	<b>3.1</b>
3.1	Explanation of Terms	3.1
<b>4</b>	<b>Serial Communication</b>	<b>4.1</b>
4.1	Interface Standards	4.2
4.1.1	Interface Converters	4.3
4.2	Protocol	4.4
4.3	Creating your own Modbus Application	4.6
4.3.1	Packet Syntax	4.7
4.3.2	Error Checking	4.10
4.3.3	Transmitting and Receiving Messages	4.11
<b>5</b>	<b>Orion-M Data Registers</b>	<b>5.1</b>
5.1	Control Registers	5.2
5.2	Profile Registers	5.19
5.2.1	Starting a Profile on the Orion-M	5.26

## Appendix

- Terms and Definitions
- Order Matrix and Replacement Parts
- Software License
- Software Usage Note
- Warranty
- Returns



## 1 What is the Orion-M?

The Orion-M is a multi-loop process control system combined with an embedded SCADA color touch interface. The Orion-M provides a configurable control platform for a variety of OEM applications requiring up to 15 separate loops of control. In addition to 15 loops of control, the Orion-M can also provide up to an additional 15 inputs for process monitoring, for a total of 30 process inputs.

The system is provided with eight 24Vdc digital inputs, two 24Vdc outputs and 6 relay outputs standard. The Orion-M can be expanded to a total of 16 digital inputs and 32 digital outputs. The Orion-M also provides the capability of accepting analog inputs for remote set point control and analog outputs capable of retransmitting system variables to other devices such as a chart recorder. The 0-10Vdc or 4-20mA user selectable signals are provided through the addition of optional analog expander cards.

The Orion-M complements its versatile hardware platform by providing a host of standard features and configuration capabilities, all through its visual, touch interface. The touch screen interface is an embedded, industrial PC with all software included. No external PC software is required for setup or configuration of the Orion-M. All of the setup and configuration data is saved to the Orion-M's internal memory.

Individual process controllers, one for each loop in the system, provide reliable, consistent and accurate control by distributing the process control requirements of the system among multiple processors. Each loop controller provides full auto tune functionality with high resolution, universal process inputs. When coupled with the built in ramping profiler of the Orion-M, it allows for automatic, timed control of all processes and outputs of the system. No other control system on the market provides the flexibility, functionality and configurability of the Orion-M.

### 1.1 Features

The digital inputs of the Orion-M can be configured as alarm inputs with adjustable delay timers, as control inputs for controlling profile operation or for direct control of the system's digital outputs. The outputs of the Orion-M can be used as direct outputs for controlling external equipment related to the application through software switches, called events, or be programmed to act as system alarm or status outputs. All outputs have adjustable delay times for on, off and cycle times.

The Orion-M can be operated in single set point or automatic profile control mode. Profile entry is made easy through the use of copy, paste and delete menu selections. Profiles can be copied to the external 'USB' memory stick and then imported to another Orion-M controller which eliminates the need to enter duplicate profiles into multiple Orion-M systems. When running in automatic profile mode, the operator can place the system into hold and change any control parameter without modifying the saved profile. This gives the operator maximum flexibility over the controlled process.

Data file analysis tools (auto-trend) make looking at historical data a simple task. Any control variable saved to the Orion-M flash memory can be plotted on the historical data trend, for any time frame within the data file's total time range. Full 'USB' print capabilities from the Orion-M interface to a standard HP inkjet printer Model 6540, 6940, 6980 (or compatible printer), eliminates the need for a PC, strip or circular chart-recording device. Graphics trends, historical and report print functions are standard.

The built in Ethernet functionality includes a 'Web Server' to provides access to all Orion-M data (view only), a VNC interface for remote control and monitoring and an NTS clock, all available via a local Intranet connection (wired or wireless), or the World Wide Web using standard software like Microsoft's Internet Explorer.

The Orion-M provides a rich set of tools for control interaction and data analysis. Views include system overviews, trends, alarms, profiles as well as historical data, alarm history and audit trail views. The menu driven interface eliminates screen 'clutter' by providing an easy to use 'Windows' interface for interaction between the user and the Orion-M system.

The Orion-M can store more than one year of data on its internal compact flash card. Data logging can be enabled manually or automatically during automatic profile run. Data backup is provided with the 'USB I-Stick' for plug and play transfer of files to any PC running Microsoft Windows XP operating systems.

The Orion-M security module provides full system security with three levels of access. Each of the three access levels allow for independent user rights. Up to 30 users can be entered into the system while the audit trail tracks all operator actions and records them.

*The Orion-M control system includes the following interface features:*

- Overview screen that displays all "runtime" information.
- Profile run and monitor views.
- Profile entry, open, save and download interface screens.
- Current alarm and alarm history views (alarm history for up to 1 year).
- Real time trends (with adjustable X,Y limits) for all inputs.
- System and application setup (control loops, monitors, inputs/outputs, alarms, etc.).
- Data logging interface screens include log point selection and historical viewing.
- 'Plug and Play' memory stick functionality for data transfer/backup.
- Full USB print capabilities and on-line help screens
- Web server for intranet/internet access (view only).
- VNC server for intranet/internet access (control/view).
- FTP data back-up for automatic data file transfer over intranet/internet.
- Integrated email server for alarm notification and file transfer.
- NTS clock with daylight savings time insures that the system is up to date.
- Full security with audit trail for tracking user actions.
- Maintenance counters for output cycles and on times.
- Helps screens are available for most screen views; configurable in English, Spanish and French
- Voice assisted help in English, Spanish and French (external speakers required – not included).

## 2 User Communications Card Installation



### WARNING:


- To avoid potential electric shock and other hazards, all mounting and wiring for the Orion-M must conform to the National Electric Code (NEC) and other locally applicable codes.
- Special expertise is required to install, wire, configure and operate the Orion-M controller. Personnel without such expertise should not install, wire or operate the Orion-M.



### CAUTION:

- Prevent metal fragments and pieces of wire from dropping inside the housing of any Orion-M component. If necessary, place a cover over the component during installation and wiring. Ingress of such fragments and chips may cause a fire hazard, damage or malfunction of the device.
- Locate the Orion-M and all related control components away from AC power/motor wiring and sources of direct heat output such as transformers, heaters or large capacity resistors.


In order to take advantage of the Orion-M's user communications interface, an RS-485 (FC5A-SIF4) communications card must be installed on the Orion-M's control module. This interface allows multiple Orion-M systems (each with their own communications card) to be connected to a single PC interface.

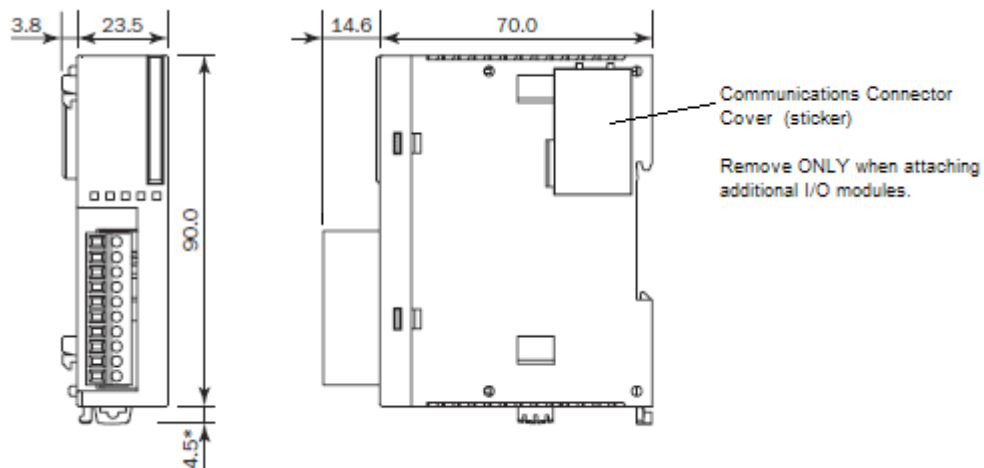

**IMPORTANT:** If the Orion-M is also equipped with the option RS-232 (FC4A-SIF2) communications interface for a barcode scanner, the RS-485 (FC5A-SIF4) user communications card must be the first communications card installed on the control module. If the RS-232 card is installed first, the Orion-M will not operate properly when power is applied and the red error (ERR) light on the control module will illuminate.

## 2.1 Communications Card Wiring

The RS485 communications card (FC5A-SIF4) allows multiple Orion-M controllers to be connected to a single communications link. The connection requires a single twisted-pair cable that is daisy-chained from one Orion-M to the next. Use of this card requires an RS485 connection on the host device. Since most computers do not provide this type of interface, an RS232 to RS485 adapter is required. Future Design recommends the use of the SNA10A or SNA10B network adapter.

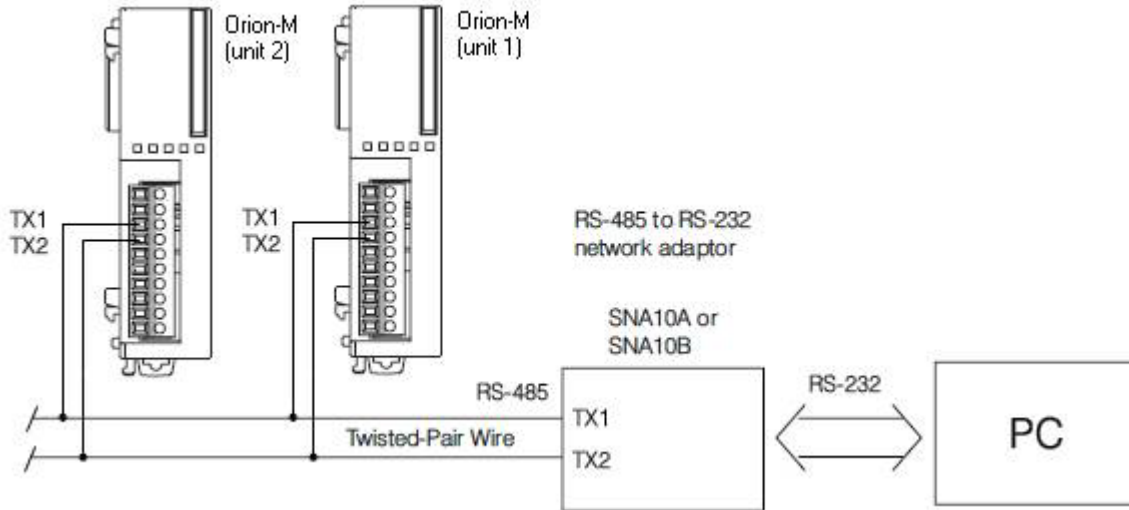

**NOTE:** When using shielded twisted-pair cable, be sure to ground only when end of the cable, preferably at the RS232 to RS485 network adaptor. Allowing any other portion of the cable shield to come in contact with ground, or grounding both ends, will cause ground loop currents to flow in that section of the cable which can cause communication errors.



## 3 Communication Basics

The purpose of this document is to provide users interested in using data communications with the Orion-M, Multi-loop Controller, the ability to set up and use a simple network of one or more Orion-M controller(s) by providing a basic understanding of data communications using standard definitions, interfaces and protocols.

In this manual, numbers in the format '0x00' represent values in hexadecimal. Numbers in the format '0' represent values in decimal and finally, numbers in the format '00000000' represent values in binary unless otherwise stated.

### 3.1 Explanation of Terms

#### ***Machine-to-Machine Communication***

In order for machines to communicate with each other, they need a code called a character format or character set. They require rules called protocol to govern their conversation and prevent confusion and errors. Computers need a connecting interface over which to communicate. They may use one pair of wires to send information in one direction and another pair to send in the opposite direction (full duplex), or they may use one pair to send data in both directions (half duplex).

#### ***Character Format***

The code or character format for the Orion-M data communications is shared by virtually everyone in the electronics industry. This code defines a stream of 1's and 0's that are created by varying a voltage signal in a regular manner. This code is the American Standard Code for Information Interchange, called ASCII.

#### ***Bits and Bytes***

The word "bit" is simply the contraction of the words **binary digit**. A bit is the basic unit in ASCII. It is either a "1" or a "0". A byte is a string of eight bits that a computer treats as a single character. ASCII can use a single byte to represent each letter of the alphabet, each digit and each punctuation mark we use.

#### ***ASCII***

The ASCII code defines 128 separate characters, one for each letter, digit and punctuation mark. ASCII also includes control characters similar to those we find on computer keys, such as backspace, shift and return. It also has nine communications control characters for identification, enquiry (inquiry), start of text, end of text, end of transmission, acknowledge, negative acknowledge and escape. The ASCII code is sometimes written in a base 16 number system that is called hexadecimal or "hex" for short. The numbers 0 through 9 represents the first ten digits of this system, and the letters A through F represents the final six digits. The 128 ASCII character codes with the decimal, binary and hexadecimal equivalents are listed in the following table.

#### ***ASCII Control Codes***

ASCII Control Codes are used to give instructions to the remote device and result in specific actions, such as a line feed instruction on a printer. ASCII Control Codes, the first 33 ASCII characters (non printable), are important for the operation of communicating equipment. They give instruction to remote devices that result in specific actions such as a line feed on a printer. Holding down the keyboard control key while pressing the appropriate keyboard key is what sends these values.

### ASCII Character Chart

Char	Code	Decimal	Binary	Hex	Char	Code	Decimal	Binary	Hex
NUL	Ctrl @	0	00000000	00	@	Shift 2	64	01000000	40
SOH	Ctrl A	1	00000001	01	A	Shift A	65	01000001	41
STX	Ctrl B	2	00000010	02	B	Shift B	66	01000010	42
ETX	Ctrl C	3	00000011	03	C	Shift C	67	01000011	43
EOT	Ctrl D	4	00000100	04	D	Shift D	68	01000100	44
ENQ	Ctrl E	5	00000101	05	E	Shift E	69	01000101	45
ACK	Ctrl F	6	00000110	06	F	Shift F	70	01000110	46
BEL	Ctrl G	7	00000111	07	G	Shift G	71	01000111	47
BS	Ctrl H	8	00001000	08	H	Shift H	72	01001000	48
TAB	Ctrl I	9	00001001	09	I	Shift I	73	01001001	49
LF	Ctrl J	10	00001010	0A	J	Shift J	74	01001010	4A
VT	Ctrl K	11	00001011	0B	K	Shift K	75	01001011	4B
FF	Ctrl L	12	00001100	0C	L	Shift L	76	01001100	4C
CR	Ctrl M	13	00001101	0D	M	Shift M	77	01001101	4D
SO	Ctrl N	14	00001110	0E	N	Shift N	78	01001110	4E
SI	Ctrl O	15	00001111	0F	O	Shift O	79	01001111	4F
DLE	Ctrl P	16	00010000	10	P	Shift P	80	01010000	50
DC1	Ctrl Q	17	00010001	11	Q	Shift Q	81	01010001	51
DC2	Ctrl R	18	00010010	12	R	Shift R	82	01010010	52
DC3	Ctrl S	19	00010011	13	S	Shift S	83	01010011	53
DC4	Ctrl T	20	00010100	14	T	Shift T	84	01010100	54
NAK	Ctrl U	21	00010101	15	U	Shift U	85	01010101	55
SYN	Ctrl V	22	00010110	16	V	Shift V	86	01010110	56
ETB	Ctrl W	23	00010111	17	W	Shift W	87	01010111	57
CAN	Ctrl X	24	00011000	18	X	Shift X	88	01011000	58
EM	Ctrl Y	25	00011001	19	Y	Shift Y	89	01011001	59
SUB	Ctrl Z	26	00011010	1A	Z	Shift Z	90	01011010	5A
ESC	Ctrl [	27	00011011	1B	[	[	91	01011011	5B
FS	Ctrl \	28	00011100	1C	\	\	92	01011100	5C
GS	Ctrl ]	29	00011101	1D	]	]	93	01011101	5D
RS	Ctrl ^	30	00011110	1E	^	Shift 6	94	01011110	5E
US	Ctrl _	31	00011111	1F	_	Shift -	95	01011111	5F
SP	SPACE	32	00100000	20	`	`	96	01100000	60
!	Shift 1	33	00100001	21	a	A	97	01100001	61
"	Shift 2	34	00100010	22	b	B	98	01100010	62
#	Shift 3	35	00100011	23	c	C	99	01100011	63
\$	Shift 4	36	00100100	24	d	D	100	01100100	64
%	Shift 5	37	00100101	25	e	E	101	01100101	65
&	Shift 7	38	00100110	26	f	F	102	01100110	66
'	Shift 8	39	00100111	27	g	G	103	01100111	67
(	Shift 9	40	00101000	28	h	H	104	01101000	68
)	Shift 0	41	00101001	29	i	I	105	01101001	69
*	Shift 8	42	00101010	2A	j	J	106	01101010	6A
+	Shift =	43	00101011	2B	k	K	107	01101011	6B
,	Shift 9	44	00101100	2C	l	L	108	01101100	6C
-	Shift -	45	00101101	2D	m	M	109	01101101	6D
.	Shift 0	46	00101110	2E	n	N	110	01101110	6E
/	Shift /	47	00101111	2F	o	O	111	01101111	6F
0	0	48	00110000	30	p	P	112	01110000	70
1	1	49	00110001	31	q	Q	113	01110001	71
2	2	50	00110010	32	r	R	114	01110010	72
3	3	51	00110011	33	s	S	115	01110011	73
4	4	52	00110100	34	t	T	116	01110100	74
5	5	53	00110101	35	u	U	117	01110101	75
6	6	54	00110110	36	v	V	118	01110110	76
7	7	55	00110111	37	w	W	119	01110111	77
8	8	56	00111000	38	x	X	120	01111000	78
9	9	57	00111001	39	y	Y	121	01111001	79
:	Shift ;	58	00111010	3A	z	Z	122	01111010	7A
;	Shift ;	59	00111011	3B	{	Shift [	123	01111011	7B
<	Shift ,	60	00111100	3C		Shift \	124	01111100	7C
=	Shift =	61	00111101	3D	}	Shift ]	125	01111101	7D
>	Shift .	62	00111110	3E	~	Shift `	126	01111110	7E
?	Shift /	63	00111111	3F	DEL	Delete	127	01111111	7F

## 4 Serial Communication

The user communications interface for the Orion-M employs serial communication, which is the exchange of data in a one-bit-at-a-time, sequential manner on a single data line or channel. Serial contrasts with parallel communication, which sends several bits of information simultaneously over multiple lines or channels. Not only is serial data communication simpler than parallel, it is also less costly.

### **Baud Rate**

The baud unit is named after Jean Maurice Emile Baudot, who was an officer in the French Telegraph Service. He is credited with devising the first uniform-length 5-bit code for characters of the alphabet in the late 19th century. What baud really refers to is modulation rate or the number of times per second that a line changes state. This is not always the same as bits per second (BPS). However, if you connect two serial devices together using direct cables then baud and BPS are in fact the same. Thus, if you are running at 9600 BPS, then the line is also changing states 9600 times per second.

Typical baud rates used for computers are 9600, 14400, 19200, 38400 and 57600 baud. As the baud rate increases, so does the transmission rate of data. Thus you get more information in a shorter period of time. However, the faster the transmission rate, the more susceptible it is to error due to the quality of the cable and sources of electrical “noise” in the environment. In order to balance throughput with reliability, the Orion-M uses a 9600 baud rate. *Thus a device used to communicate with the Orion-M must have its serial port set for 9600 baud in order for data communications to work properly.*

### **Start and Stop Bits**

The start bit informs the receiving device that a character is coming, and a stop bit tells it that a character is complete. The start bit is always a 0. The stop bit is always a 1. The human speech equivalent of these bits could be a clearing of the throat to get someone’s attention (start bit); and a pause at the end of a phrase (stop bit). Both help the listener understand the message.

A stop bit has a value of 1 - or a mark state - and it can be detected correctly even if the previous data bit also had a value of 1. This is accomplished by the stop bit’s duration. Stop bits can be 1, 1.5, or 2 bit periods in length. The Orion-M uses the default – and most common – length of 1 period for the stop bit. *A device used to communicate with the Orion-M must also have its serial port set to use a stop bit of 1 in order for data communications to work properly.*

### **Parity Bit**

Besides the synchronization provided by the use of start and stop bits, an additional bit called a parity bit may optionally be transmitted along with the data. A parity bit affords a small amount of error checking, to help detect data corruption that might occur during transmission. There are several defined parity selections available for serial communications. They are even parity, odd parity, mark parity, space parity or none at all can be used. When even or odd parity is being used, the number of marks (logical 1 bits) in each data byte are counted, and a single bit is transmitted following the data bits to indicate whether the number of 1 bits just sent is even or odd.

For example, when even parity is chosen, the parity bit is transmitted with a value of 0 if the number of preceding marks is an even number. For the binary value of 0110 0011 the parity bit would be 0. If even parity were in effect and the binary number 1101 0110 were sent, then the parity bit would be 1. Odd parity is just the opposite, and the parity bit is 0 when the number of mark bits in the preceding word is an odd number. Mark parity means that the parity bit is always set to the mark signal condition and likewise space parity always sends the parity bit in the space signal condition. Since these two parity options serve no useful purpose whatsoever, they are almost never used. *The Orion-M is set for even parity. Thus, a device used to communicate with the Orion-M must also have its serial port set to use the same parity setting (even) in order for data communications to work properly.*

## 4.1 Interface Standards

An interface is a means for electronic systems to interact. It's a specific kind of electrical wiring configuration. It has nothing to do with how data is sent over that connection. The two most common interfaces used today are RS-232, which provides a simple 1 to 1 connection and RS485, which provides a multi-drop connection where more than one device can be placed on the same line. The Orion-M's communications interface is the later, providing the ability to tie multiple Orion-M systems to the same communications link.

### ***EIA-232 (Full Duplex)***

An EIA-232 (formerly RS-232C) interface uses three wires: a single transmit wire; a single receive wire; and a common line. Only two devices can use an EIA-232 interface. A -3 to -24 volt signal indicates a 1 and a +3 to +24 volt signal indicates a 0. The EIA-232 signal is referenced to the common line rather than to a separate wire, as in EIA-485. Thus, an EIA-232 cable is limited to a maximum of 50 feet, due to noise susceptibility.

### ***EIA-485 (Half Duplex)***

An EIA-485 interface uses two wires: a T/R+, a T/R- line. A -5-volt signal is interpreted as a 1, a +5-volt signal as a 0. As many as 31 slave devices can be connected to a master on a multi-drop network up to 4000 feet long.

### ***Wiring***

Most PCs have a standard EIA-232 port (usually referred to as RS-232). In these instances, you must use an interface converter to connect to an EIA-485 multi-drop system. For this connection, the terminals on most converters marked "TX1/RX1 or T+/R+" connect to terminal "A" of the RS-485 card and the terminals marked "TX2/RX2 or T-/R-" connect to terminal "B" of the RS-485 card. The standards do not specify the wire size and type. Use of 24 AWG twisted pair provides excellent results. If shielded cable is used, terminate the shield at one end only. Always follow the manufacturer's instructions supplied with the interface converter. See Biasing of Buses next.

### ***Biasing of Buses***

The EIA-485 standard requires the bus to be biased for reliable communication. This requires termination resistors to be placed across the T/R+ and T/R- wires. One resistor is placed at the PC where it connects to the EIA-485 bus. The second resistor is placed at the last controller on the network. Do not place resistors at each controller. The impedance of the wires used for the bus determines the resistor value. For twisted pair, the value is typically 120 ohms. In addition, it may be necessary to have a pull-up and pull-down resistor between the power supply and ground of the interface adapter.

Check the documentation that came with your interface adapter. Biasing the bus reduces reflection of signals sent down the bus. These reflections are sometimes referred to as a standing wave. This condition is most notable when communicating at high baud rates over longer distances.

## 4.1.1 Interface Converters

The purpose of an interface converter is to allow two different buses to be connected together. Interface converters are required when connecting an EIA-232 port to an EIA-485 bus. The EIA-485 bus is a half duplex bus. This means that it can only send or receive data at any given time. Some interface converters on the market provide the ability to have full duplex with the EIA-485 bus. This is accomplished by using two receivers and transmitters tied in tandem. This type of converter will not work with the Orion-M controller. Be sure that the model you purchase is designed for half duplex.

Another consideration when selecting an interface converter is how the converter handles switching between transmit and receive. Typically it is accomplished via a handshake line from the PC. When data flows into the converter from the PC, a handshake line is placed high. When data flows out of the converter to the PC, the handshake line is placed low. In this way, the handshake line controls the direction of information. Another method of achieving this is to use a built-in timer. The converter switches to transmit when a character is sent to it from the PC. After a period of time when the PC has not transmitted, the converter switches to a receive mode.

It is important that you understand how your converter accomplishes this task. You are required to wire this feature or make settings on the converter to enable this function. The PC will not talk to the controller correctly without properly setting this. Your converter may also require settings through dip switches, to set up communications parameters like baud rate, data bits, start bits, stop bits and handshaking. The converter may also require a separate power supply. Some converters get their power from the handshake lines of the PC. If you rely on this method, you will need to wire these additional lines. In addition, your software must set these lines high. A more reliable method is to use an external power supply. This is especially necessary when using a laptop computer. See the documentation that is provided with your converter for more information.

Not all converters are equal in performance. If your chamber operates in a harsh, electrically noisy environment, this can cause less robust converters to work intermittently or not at all. The following converter has been tested and is compatible with the Orion-M. The converter is equipped with automatic send data control circuits, driver control in the converter hardware, so you don't have to work with software at all. The circuit monitors data flow and enables the driver during transmission and automatically disables it when no data is being sent. There is no need to rework software or install new drivers.

Future Design Controls  
7524 West 98th Place  
Bridgeview, IL 60455  
Phone: 888-751-5444  
Fax: 888-307-8014  
E-mail: [csr@futuredesigncontrols.com](mailto:csr@futuredesigncontrols.com)  
[www.futuredesigncontrols.com](http://www.futuredesigncontrols.com)

Part # **SNA10A** Smart Network Adapter  
Part # **DB9M-DB9F-6ft** (Cable Accessory to connect SNA10A to PC)

## 4.2 Protocol

Protocol describes how to initiate an exchange. It also prevents two machines from attempting to send data at the same time. There are a number of different data communications protocols, just as there are different human cultural protocols that vary according to the situation.

The protocol portion of Orion-M communications is very important, because it provides a quality of communication that others often don't have. Protocol-driven communications are more accurate, because they are less prone to both operator and noise errors. Protocol maintains system integrity by requiring a response to each message. It's like registered mail — you know that your letter has been received because the post office sends you a signed receipt.

In Orion-M data communications, a dialog will continue successfully as long as the messages are in the correct form and responses are returned to the protocol leader. If the operator enters an incorrect message, or interference comes on to the data line, there will be no response. In that case the master must retransmit the message or go to a recovery procedure. If an operator continues to enter an incorrect message or interference continues on the data line, the system will halt until the problem is resolved. The Orion-M uses Modbus RTU as the protocol of choice. Modbus RTU enables a PC to read and write directly to registers containing the Orion-M's parameters. With it, you can read all of the controller's parameters with just a few read commands.

### ***Modbus Remote Terminal Unit (RTU)***

Gould Modicon, now called AEG Schneider, created this protocol for process control systems called "Modbus". It has the advantage over other protocols of being extremely reliable in exchanging information. This protocol works on the principle of packet exchanges. The packet contains the address of the controller to receive the information, a command field that says what is to be done with the information and several fields of data. The last item sent in the packet is a field to ensure the data is received intact. This is called a cyclic redundancy check-sum. See the following example for information on how to generate this value. All information is exchanged in hex numbers. The Orion-M only supports the binary version of Modbus, referenced as RTU. The ASCII version is less efficient and is not supported. Therefore, you must be certain to format all data in hexadecimal.

The CRC (Cyclical Redundancy Checksum) is calculated by the following steps:

1. Load a 16-bit register (called CRC register) with 0xFFFF
2. Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.
3. Shift the CRC register one bit to the right with MSB zero filling. Extract and examine the LSB.
4. If the LSB of the CRC register is zero, repeat step 3, else Exclusive OR the CRC register with the polynomial value 0xA001.
5. Repeat steps 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.
6. Repeat steps 2 through 5 for the next 8-bit byte of the command message. Continue doing this until all bytes of the command message have been processed. The final contents of the CRC register is the CRC value.

**When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first.**

## Example Cyclical Redundancy Checksum (CRC) Algorithm

```
unsigned int calc_crc(unsigned char *start_of_packet, unsigned char *end_of_packet)
{
    unsigned int crc;
    unsigned char bit_count;
    unsigned char *char_ptr;

    /* Start at the beginning of the packet */
    char_ptr = start_of_packet;
    /* Initialize CRC */
    crc = 0xFFFF;
    /* Loop through the entire packet */
    do{
        /* Exclusive-OR the byte with the CRC */
        crc ^= (unsigned int)*char_ptr;
        /* Loop through all 8 data bits */
        bit_count = 0;
        do{
            /* If the LSB is 1, shift the CRC and XOR the polynomial mask with the CRC */
            if(crc & 0x0001){
                crc >>= 1;
                crc ^= 0xA001;
            }
            /* If the LSB is 0, shift the CRC only */
            else{
                crc >>= 1;
            }
        } while(bit_count++ < 7);
    } while(char_ptr++ < end_of_packet);
    return(crc);
}
```



### 4.3 Creating your own Modbus Application

Listed below are a few of the more common software packages that claim to support the Modbus protocol. This list is provided as informational only. Contact the software manufacturer for more information on applying their software.

LabView by National Instruments  
11500 N Mopac Expwy  
Austin, TX 78759-3504  
Phone 800-683-8411  
<http://www.natinst.com>

InstantHMI 5.1 by Software Horizons, Inc.  
100 Treble Cove Road  
North Billerica, MA 01862-2231  
Phone 617-933-3747  
<http://www.shorizons.com>

SpecView by SpecView Corporation  
13409 53<sup>rd</sup> Ave NW  
Gig Harbor, WA 98332  
Phone 253-853-3199  
<http://www.specview.com>

Wonderware by Wonderware  
26561 Rancho Pkwy. South  
Lake Forest, CA 92630  
Phone 949-727-3200  
<http://www.wonderware.com>

If you already have a software application that uses Modbus, you can simply skip to the Orion-M parameter table in the Getting Started section for the information your program requires. The rest of this section provides information on writing a software application that uses Modbus.

1. You must code messages in eight-bit bytes, with even parity, one stop bit (8, even, 1). The Orion-M has its parity set to even as default from the factory.
2. Negative parameter values must be written in twos' complement format. Parameters are stored in two-byte registers accessed with read and write commands to a relative address.
3. Messages are sent in packets that must be delimited by a pause at least as long as the time it takes to send 28 bits (3.5 characters). To determine this time in seconds, divide 28 by the baud rate. In the case of Orion-M communications at 9600 baud, this calculates to a minimum period of ~3ms.
4. Values containing decimal points such as process values and setpoints, have the decimal point implied, i.e., the data exchange can only be performed using whole numbers. Thus, the value must be scaled appropriately in order to exchange the data correctly. For example, a setpoint of 78.4 degrees must be sent as a value of 784 in order for the Orion-M to be set correctly. Likewise, a process value read from the Orion-M with a value of 827 is actually 82.7 degrees. Consult the parameter table for the proper format and allowable range of each value.

#### **Handling Communication Errors**

Messages with the wrong format or illegal values will receive an exception response. Messages with the wrong CRC or timing will receive no response. It is the user's responsibility to handle the error appropriately within their own software and determine whether to resend the message or halt for operator intervention.


#### **User Responsibility**

Refrain from altering prompts that do not appear on the Orion-M's front panel or are not included on the specific model. Refrain from reading or writing from/to a register that does not exist or is currently disabled. Writing values to unassigned registers could cause system instability, malfunction or failure. Care must also be taken in that the process can not cause damage to property or injury to personnel if the wrong commands are sent due to operator error or equipment malfunction.





## 4.3.1 Packet Syntax

Each message packet begins with a one-byte controller address, from 0x01 to 0x1F. The second byte in the message packet identifies the message command: read (0x03); write single (0x06) or write multiple (0x10). The next “n” bytes of the message packet contain register addresses and/or data. The last two bytes in the message packet contain a two-byte Cyclical Redundancy Checksum (CRC) for error detection.

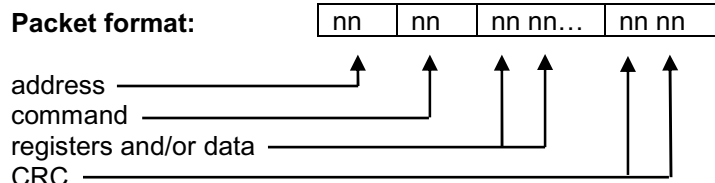

### Read Register(s) Command (0x03)

This command returns from 1 to 64 registers. This command is used for reading one or more data locations from the Orion-M.

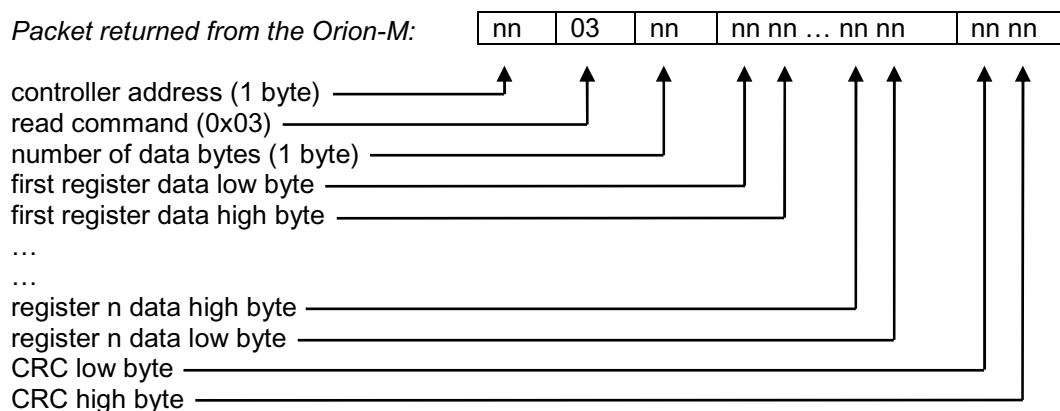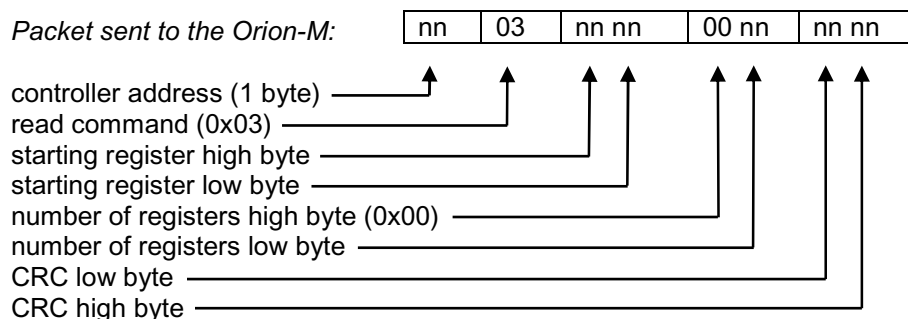



**Example:** Read registers 60 and 61 (loop 1 process variable and setpoint) of controller at address 1 configured for 1 decimal point.

Sent: 01 03 00 3C 00 02 04 07  
 Received: 01 03 04 **03 0D 01 F3** 2A 61

Message data: 781 (0x**030D**) = process variable of 78.1  
 499 (0x**01F3**) = setpoint of 49.9

### Write Register Command (0x06)

This command writes a value to a single register. This command is used for setting a single control value in the Orion-M

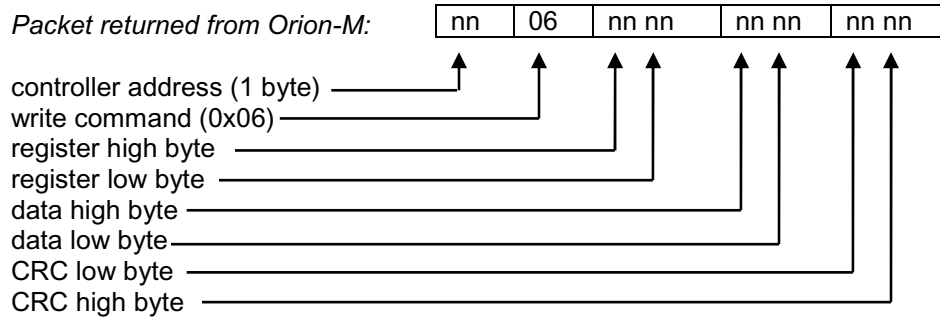
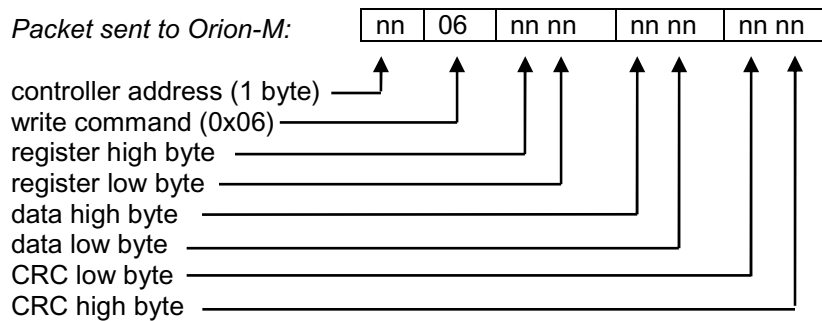


**Example:** Write register 67 (loop 3 setpoint) of controller at address one configured with no decimal point to 75 degrees (0x**004B**).

Sent: 01 06 00 43 **00 4B** 38 29  
 Received: 01 06 00 43 00 4B 38 29

## Write Registers Command (0x10)

This command writes values to multiple registers in sequential order. This command can be used for setting multiple control values in the Orion-M using a single command.

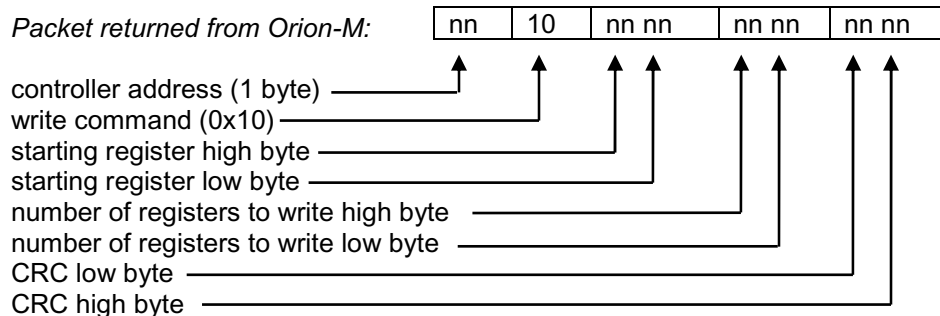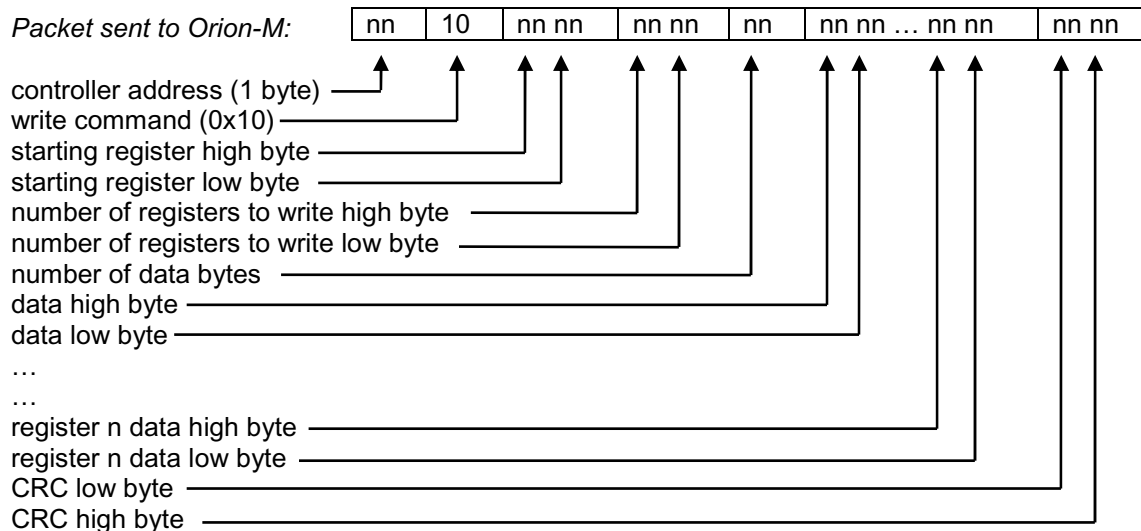

**Example:** Set the profile start step to 1 (register 14) and start the profile (value of 8 in register 15) on the controller at address one.


Sent: 01 10 00 0E 00 02 04 **00 01 00 08** 22 25

Received: 01 10 00 0E 00 02 20 0B

### Exception Responses

When the Orion-M cannot process a command, it returns an exception response and sets the high bit (0x80) of the command.

- 0x01 illegal command
- 0x02 illegal data address
- 0x03 illegal data value

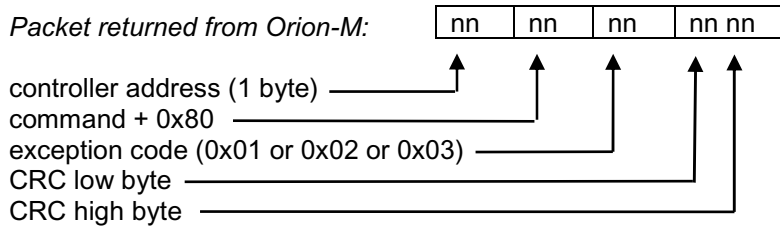

### 4.3.2 Error Checking

In Modbus communications, every message sent from the master (your software) receives a response from the slave (Orion-M), including write commands. Thus, after each command sent, you should read the controller response before sending the next message. This provides the method of error checking in order to verify that the message you sent was received correctly, and that the controller is operating accordingly. This allows you to then determine the appropriate recovery response in case the message was not received correctly by the controller, and what action is to be taken by an operator and/or the software itself.

The exception responses provide a basic form of error checking. When an exception response is received, the code provided in the response will tell you what the error was in the sent message. However, this is only valid if the controller receives the message you sent, and there was an out-of-range value or simple transmission error in the message. It does not validate incomplete or failed transmissions. To insure that the data you receive from a read command is correct, and that the controller properly received a write command, you must parse the controller's response and validate the return message to insure it is correct.

In order to validate that the message you received is correct, you must calculate the CRC for the received message and compare it with the CRC that the controller appended to the message. This verifies that the data you received was what the Orion-M sent. If the CRC's do not match, there was an error in the transmission and the entire message should be ignored. This could then be followed by an attempt to resend the failed command, or halt operation and alert an operator.

**Example:** Read registers 60 and 61 (loop 1 process variable and setpoint) of controller at address 1.

```
Command sent to Orion-M      01 03 00 3C 00 02 04 07
Message received from Orion-M: 01 03 04 03 0D 01 F3 2A 61
```

```
Calculated CRC: 2A61 (calculated from message 01 03 04 03 0D 01 F3)
Received CRC: 2A61
```

The calculated CRC matches the received CRC, the message is valid. Note that the last two bytes of the received message are not used to calculate the CRC. The last two bytes are the CRC that the Orion-M appended to the message. Do not include them when calculating the CRC.

### 4.3.3 Transmitting and Receiving Messages

In order to reliably communicate with the Orion-M, it is important to develop an efficient means of transmitting and receiving messages. Modbus is a structured protocol and it must be properly followed. It is recommended, if possible, to locate an existing communication driver to incorporate into your software. Developing one from scratch can be challenging. However, if one is not available, or you choose to develop one yourself, the following guidelines may be of assistance.

#### Transmitting Messages

When sending a message to the Orion-M, it is important to remember that Modbus RTU protocol does not have start-of-transmission or end-of-transmission characters. All messages are “framed” using timeouts between characters. A timeout between characters is a pause of at least 1.5 characters in length, and a timeout between frames is a pause of at least 3.5 characters in length. If either of these periods are exceeded while a message is being sent to the Orion-M, it will discard the data it has received and wait for the first frame of the next valid communication.

At 9600 baud, the timeout between characters is a little over 1ms, and the Orion-M will take any characters after a delay of as little as 3ms, as the beginning of a new message. This is an important consideration, because in creating your message, there are several steps that must be executed in order to build the packet and format the data properly into hexadecimal to send out the serial port of your PC. If you write code in a manner that steps byte by byte through sending the message out the serial port, formatting each piece of data prior to sending it, there is a good possibility that too much time may pass between characters, thus causing a failed transmission.

Therefore, it is recommended that the entire message, including the CRC, be created and assembled prior to being sent to the serial port. By assembling the main body of the message first, you can then pass it to the CRC algorithm which can step sequentially through the message, generate the CRC and append it to the message body. Once the message is completely assembled, it can then be sent out the serial port as a completed packet. This will insure that the message reaches the Orion-M within the proper framing.


#### Receiving Messages

Due to the fact that Modbus RTU protocol does not have start-of-transmission or end-of-transmission characters, if the serial port driver you are using does not support an interval timeout setting allowing you to automatically terminate a read after a specified time passes between bytes (signaling the end of a message), you must know how long the message will be that you are receiving. That allows you to know how many bytes to read from your serial port and when you have received the entire message. If you rely on a maximum timeout period to terminate the read, depending upon the length of the received message, you will either lose a portion of the message or have to set the timeout period so high, that it will greatly affect the throughput of your code.

As can be seen from the previous examples for read and write commands in Section 4.3.1, the length of the returned message will vary based on the type of command, and for read commands, how many registers are being returned. Response messages can vary in length from as little as 5 bytes for an exception response to as many as 133 bytes for a read command. Therefore, in order to read in the message efficiently, you need to know what type of command it is in response to.

The response messages are always coded with the first two bytes of the message as the controller address and command type. When executing a read, read in only the first 2 bytes of data at the serial port. Examine the second byte and determine what the command is. If it is a write command (0x06 or 0x10), you know the response message is 8 bytes long. You can then read in the next 6 bytes of data from the serial port to complete the message. You can then calculate the CRC for the first 6 bytes of that message, and compare it to the last 2 bytes. If they match, then the communication completed successfully.

If the response is to a read command (0x03), you must then perform a single byte read from your serial port in order to get the next byte of the message. The third byte in a read response message is the number of data bytes in the message. By reading in this value, you then know how many data bytes follow. Note that this value does not include the 2 bytes for the CRC. Thus, when reading in the rest of the message, you will read in the number of data bytes plus an additional two, in order to get the CRC. You can then calculate the CRC for the message and compare it to the last two bytes. If they match, the data you received is valid.

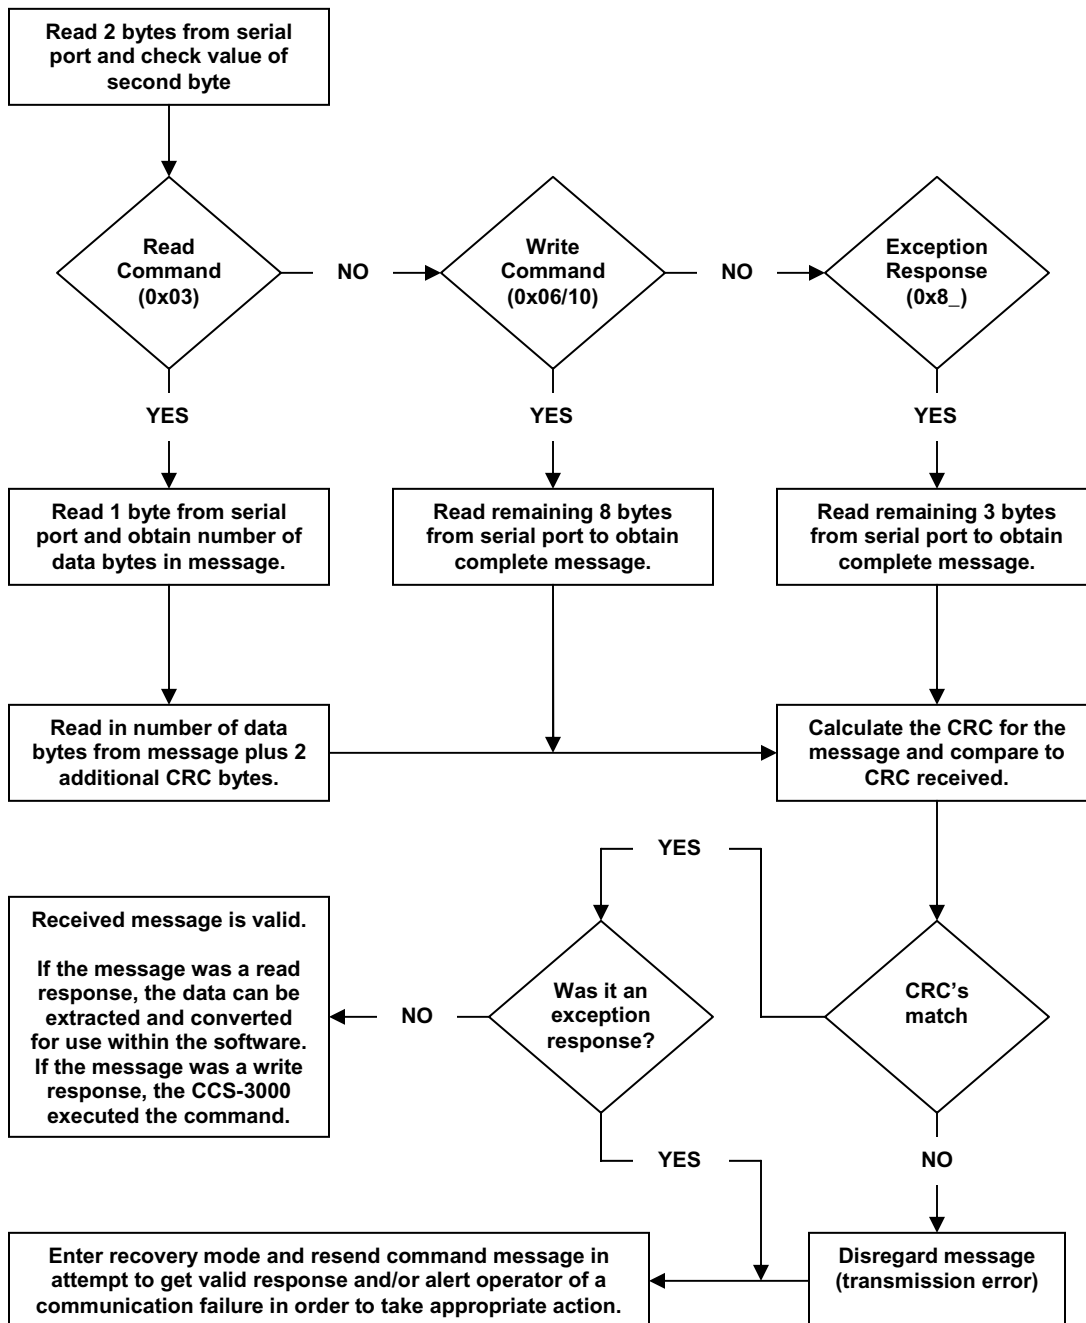


## 5 Orion-M Data Registers

Some of the values contained in the Orion-M's register base contain bit oriented values. This means that each bit of the word indicates an on/off status for a specific setting or condition. In handling these values, it is recommended that the word be converted to its binary equivalent.

By converting the value to its binary equivalent, it produces a Boolean array of true [bit on (1)] and false [bit off (0)] values. This allows each bit to be examined individually. In the same manner, creating a Boolean array of 16 bits produces an equivalent hexadecimal value that can be sent to the Orion-M in order to set a control register.

For the purpose of this manual, parameters defined as bit oriented will have the function of each bit associated with the bit's index number in the data word. The index number is equal to that of a typical array function. Thus, an index number of zero, selects the first bit in the word (LSB). An index number of 1 selects the second bit in the word, and so on. This helps eliminate offset selection errors that may occur when coding software and using array functions to select which bit in the word that is required for examination.

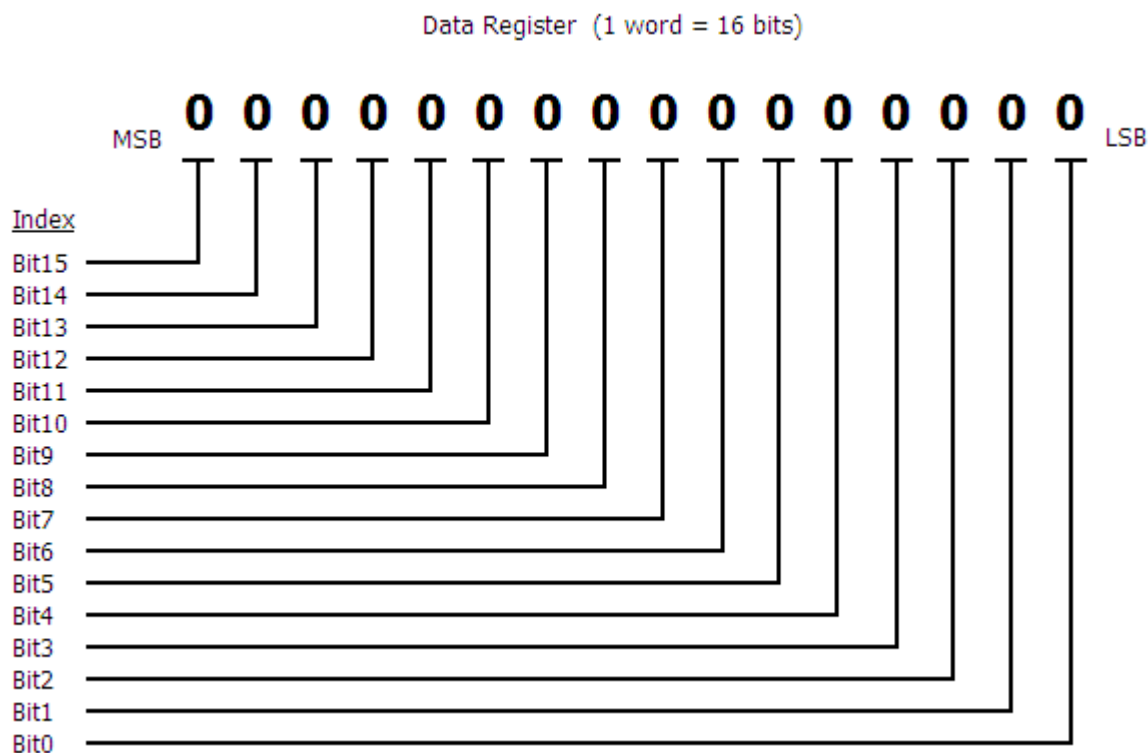

*Adhere to the following lists of registers and their allowable data ranges. DO NOT attempt to write to any other register number than those listed. DO NOT write to registers that are for options your controller does not have. Failure to adhere to this requirement can result in erratic control and/or damage to equipment.*

**All register numbers are listed in relative values. To convert to absolute values, add 40001.**

## 5.1 Control Registers

Register Address	Parameter Description	Data *A Type	Range		*C Unit
			*B Low	*B High	
0 (0x0000)	System Mode Control	R/W	*B1	*B1	-
1 (0x0001)	<b>RESERVED – DO NOT write to register</b>				
2 (0x0002)	Power Out Recovery Mode	R/W	*B2	*B2	-
3 (0x0003)	Recovery Power Out Time	R/W	0	32767	seconds
4 (0x0004)	Demand Defrost/Status	R/W	*B3	*B3	-
5 (0x0005)	Defrost Interval	R/W	0	999	hours
6 (0x0006)	Defrost Duration	R/W	0	999	minutes
7 (0x0007)	Fan Delay (PreCool)	R/W	0	999	seconds
8 (0x0008)					
9 (0x0009)	Control Loop Auto/Manual Control	R/W	*B4	*B4	-
10 (0x000A)	Control Loop Autotune Activation	R/W	*B5	*B5	-
11 (0x000B)	<b>RESERVED – DO NOT write to register</b>				
12 (0x000C)	System Events 1-16	R/W	*B6	*B6	-
13 (0x000D)	System Events 16-32	R/W	*B7	*B7	-
14 (0x000E)	Profile Start Step Number	W	1	99	-
15 (0x000F)	Profile Operating Status	R/W	*B8	*B8	-
16 (0x0010)	Profile Advance Previous/Next Step	W	*B9	*B9	-
17 (0x0011)	Profile Step Time Addition	W	0	32767	minutes
18 (0x0012)	Profile Name Characters 1 & 2	R	*B10	*B10	-
19 (0x0013)	Profile Name Characters 3 & 4	R	*B10	*B10	-
20 (0x0014)	Profile Name Characters 5 & 6	R	*B10	*B10	-
21 (0x0015)	Profile Name Characters 7 & 8	R	*B10	*B10	-
22 (0x0016)	Profile Name Characters 9 & 10	R	*B10	*B10	-
23 (0x0017)	Year/Month Profile Started	R	*B11	*B11	-
24 (0x0018)	Day/DOW Profile Started	R	*B12	*B12	-
25 (0x0019)	Hour/Minute Profile Started	R	*B13	*B13	-
26 (0x001A)	Year/Month Estimated Profile Complete	R	*B11	*B11	-
27 (0x001B)	Day/DOW Estimated Profile Complete	R	*B12	*B12	-
28 (0x001C)	Hour/Minute Estimated Profile Complete	R	*B13	*B13	-
29 (0x001D)	Current Step of profile	R	1	99	-
30 (0x001E)	Hours Left in Current Step	R	0	999	hours
31 (0x001F)	Minutes/Seconds Left in Current Step	R	*B14	*B14	-
32 (0x0020)	Profile Wait For Input Status	R	*B15	*B15	-
33 (0x0021)	Waiting For Input (loop/monitor/digital)	R	*B16	*B16	-
34 (0x0022)	Wait For Setpoint	R	-3276.8	3276.7	*C1
35 (0x0023)	Current Step Jump Step Number	R	1	99	-
36 (0x0024)	Current Step Jumps Remaining	R	0	999	-



Register Address	Parameter Description	Data *A Type	Range		*C Unit
			*B Low	High	
37 (0x0025)	Profile Loop 1 Target Setpoint	R	-32768	32767	*C2
38 (0x0026)	Profile Loop 2 Target Setpoint	R	-32768	32767	*C2
39 (0x0027)	Profile Loop 3 Target Setpoint	R	-32768	32767	*C2
40 (0x0028)	Profile Loop 4 Target Setpoint	R	-32768	32767	*C2
41 (0x0029)	Profile Loop 5 Target Setpoint	R	-32768	32767	*C2
42 (0x002A)	Profile Loop 6 Target Setpoint	R	-32768	32767	*C2
43 (0x002B)	Profile Loop 7 Target Setpoint	R	-32768	32767	*C2
44 (0x002C)	Profile Loop 8 Target Setpoint	R	-32768	32767	*C2
45 (0x002D)	Profile Loop 9 Target Setpoint	R	-32768	32767	*C2
46 (0x002E)	Profile Loop 10 Target Setpoint	R	-32768	32767	*C2
47 (0x002F)	Profile Loop 11 Target Setpoint	R	-32768	32767	*C2
48 (0x0030)	Profile Loop 12 Target Setpoint	R	-32768	32767	*C2
49 (0x0031)	Profile Loop 13 Target Setpoint	R	-32768	32767	*C2
50 (0x0032)	Profile Loop 14 Target Setpoint	R	-32768	32767	*C2
51 (0x0033)	Profile Loop 15 Target Setpoint	R	-32768	32767	*C2
52 (0x0034)	Last Profile Jump Made from Step	R	1	99	-
53 (0x0035)	Last Profile Jump Made to Step	R	1	99	-
54 (0x0036)	Total Profile Jumps Made	R	0	32767	-
55 (0x0037)	Loop under Profile Control	R	*B17	*B17	-
56 (0x0038)					
57 (0x0039)					
58 (0x003A)					
59 (0x003B)					
60 (0x003C)	Loop 1 Process Variable (PV)	R/W	-32768	32767	*C2
61 (0x003D)	Loop 1 Setpoint (SP)	R	-32768	32767	*C2
62 (0x003E)	Loop 1 Percent Output (%Out)	R/W	-100.00	100.00	%
63 (0x003F)	Loop 2 Process Variable (PV)	R/W	-32768	32767	*C2
64 (0x0040)	Loop 2 Setpoint (SP)	R	-32768	32767	*C2
65 (0x0041)	Loop 2 Percent Output (%Out)	R/W	-100.00	100.00	%
66 (0x0042)	Loop 3 Process Variable (PV)	R/W	-32768	32767	*C2
67 (0x0043)	Loop 3 Setpoint (SP)	R	-32768	32767	*C2
68 (0x0044)	Loop 3 Percent Output (%Out)	R/W	-100.00	100.00	%
69 (0x0045)	Loop 4 Process Variable (PV)	R/W	-32768	32767	*C2
70 (0x0046)	Loop 4 Setpoint (SP)	R	-32768	32767	*C2
71 (0x0047)	Loop 4 Percent Output (%Out)	R/W	-100.00	100.00	%
72 (0x0048)	Loop 5 Process Variable (PV)	R/W	-32768	32767	*C2
73 (0x0049)	Loop 5 Setpoint (SP)	R	-32768	32767	*C2
74 (0x004A)	Loop 5 Percent Output (%Out)	R/W	-100.00	100.00	%

Register Address	Parameter Description	Data *A Type	Range		*C Unit
			*B Low	High	
75 (0x004B)	Loop 6 Process Variable (PV)	R/W	-32768	32767	*C2
76 (0x004C)	Loop 6 Setpoint (SP)	R	-32768	32767	*C2
77 (0x004D)	Loop 6 Percent Output (%Out)	R/W	-100.00	100.00	%
78 (0x004E)	Loop 7 Process Variable (PV)	R/W	-32768	32767	*C2
79 (0x004F)	Loop 7 Setpoint (SP)	R	-32768	32767	*C2
80 (0x0050)	Loop 7 Percent Output (%Out)	R/W	-100.00	100.00	%
81 (0x0051)	Loop 8 Process Variable (PV)	R/W	-32768	32767	*C2
82 (0x0052)	Loop 8 Setpoint (SP)	R	-32768	32767	*C2
83 (0x0053)	Loop 8 Percent Output (%Out)	R/W	-100.00	100.00	%
84 (0x0054)	Loop 9 Process Variable (PV)	R/W	-32768	32767	*C2
85 (0x0055)	Loop 9 Setpoint (SP)	R	-32768	32767	*C2
86 (0x0056)	Loop 9 Percent Output (%Out)	R/W	-100.00	100.00	%
87 (0x0057)	Loop 10 Process Variable (PV)	R/W	-32768	32767	*C2
88 (0x0058)	Loop 10 Setpoint (SP)	R	-32768	32767	*C2
89 (0x0059)	Loop 10 Percent Output (%Out)	R/W	-100.00	100.00	%
90 (0x005A)	Loop 11 Process Variable (PV)	R/W	-32768	32767	*C2
91 (0x005B)	Loop 11 Setpoint (SP)	R	-32768	32767	*C2
92 (0x005C)	Loop 11 Percent Output (%Out)	R/W	-100.00	100.00	%
93 (0x005D)	Loop 12 Process Variable (PV)	R/W	-32768	32767	*C2
94 (0x005E)	Loop 12 Setpoint (SP)	R	-32768	32767	*C2
95 (0x005F)	Loop 12 Percent Output (%Out)	R/W	-100.00	100.00	%
96 (0x0060)	Loop 13 Process Variable (PV)	R/W	-32768	32767	*C2
97 (0x0061)	Loop 13 Setpoint (SP)	R	-32768	32767	*C2
98 (0x0062)	Loop 13 Percent Output (%Out)	R/W	-100.00	100.00	%
99 (0x0063)	Loop 14 Process Variable (PV)	R/W	-32768	32767	*C2
100 (0x0064)	Loop 14 Setpoint (SP)	R	-32768	32767	*C2
101 (0x0065)	Loop 14 Percent Output (%Out)	R/W	-100.00	100.00	%
102 (0x0066)	Loop 15 Process Variable (PV)	R/W	-32768	32767	*C2
103 (0x0067)	Loop 15 Setpoint (SP)	R	-32768	32767	*C2
104 (0x0068)	Loop 15 Percent Output (%Out)	R/W	-100.00	100.00	%
105 (0x0069)	Monitor 1 Process Variable	R	-32768	32767	*C2
106 (0x006A)	Monitor 2 Process Variable	R	-32768	32767	*C2
107 (0x006B)	Monitor 3 Process Variable	R	-32768	32767	*C2
108 (0x006C)	Monitor 4 Process Variable	R	-32768	32767	*C2
109 (0x006D)	Monitor 5 Process Variable	R	-32768	32767	*C2
110 (0x006E)	Monitor 6 Process Variable	R	-32768	32767	*C2
111 (0x006F)	Monitor 7 Process Variable	R	-32768	32767	*C2
112 (0x0070)	Monitor 8 Process Variable	R	-32768	32767	*C2

Register Address	Parameter Description	Data *A Type	Range		*C Unit
			*B Low	High	
113 (0x0071)	Monitor 9 Process Variable	R	-32768	32767	*C2
114 (0x0072)	Monitor 10 Process Variable	R	-32768	32767	*C2
115 (0x0073)	Monitor 11 Process Variable	R	-32768	32767	*C2
116 (0x0074)	Monitor 12 Process Variable	R	-32768	32767	*C2
117 (0x0075)	Monitor 13 Process Variable	R	-32768	32767	*C2
118 (0x0076)	Monitor 14 Process Variable	R	-32768	32767	*C2
119 (0x0077)	Monitor 15 Process Variable	R	-32768	32767	*C2
120 (0x0078)	<b>RESERVED – DO NOT</b> write to register				
121 (0x0079)	<b>RESERVED – DO NOT</b> write to register				
122 (0x007A)	<b>RESERVED – DO NOT</b> write to register				
123 (0x007B)	<b>RESERVED – DO NOT</b> write to register				
124 (0x007C)	<b>RESERVED – DO NOT</b> write to register				
125 (0x007D)	<b>RESERVED – DO NOT</b> write to register				
126 (0x007E)	<b>RESERVED – DO NOT</b> write to register				
127 (0x007F)	<b>RESERVED – DO NOT</b> write to register				
128 (0x0080)	<b>RESERVED – DO NOT</b> write to register				
129 (0x0081)	<b>RESERVED – DO NOT</b> write to register				
130 (0x0082)	<b>RESERVED – DO NOT</b> write to register				
131 (0x0083)	<b>RESERVED – DO NOT</b> write to register				
132 (0x0084)	<b>RESERVED – DO NOT</b> write to register				
133 (0x0085)	<b>RESERVED – DO NOT</b> write to register				
134 (0x0086)					
135 (0x0087)					
136 (0x0088)	Alarm Acknowledge	W	0	1	-
137 (0x0089)	Loop Communication Fault Alarms	R	*B18	*B18	-
138 (0x008A)	<b>RESERVED – DO NOT</b> write to register				
139 (0x008B)	Loop Input Alarms	R	*B19	*B19	-
140 (0x008C)	Monitor Input Alarms	R	*B20	*B20	-
141 (0x008D)	Loop/Monitor Alarms	R	*B21	*B21	-
142 (0x008E)	Loop/Monitor Alarms (w/Service Alert)	R	*B22	*B22	-
143 (0x008F)	Digital Input Alarms	R	*B23	*B23	-
144 (0x0090)					
145 (0x0091)					
146 (0x0092)					
147 (0x0093)					
148 (0x0094)					
149 (0x0095)					
150 (0x0096)					

Register Address	Parameter Description	Data *A Type	Range *B		*C Unit
			Low	High	
151 (0x0097)					
152 (0x0098)					
153 (0x0099)					
154 (0x009A)					
155 (0x009B)					
156 (0x009C)					
157 (0x009D)					
158 (0x009E)					
159 (0x009F)	Redundancy Primary System/Status	R/W	*B24	*B24	-
160 (0x00A0)	Alternating Run Time	R/W	0	32767	minutes
161 (0x00A1)	Alternating Time of Day (HH)	R/W	0	23	hours
162 (0x00A2)	Alternating Time of Day (MM)	R/W	0	59	minutes
163 (0x00A3)	Product Load Timer Demand/Status	R/W	*B25	*B25	-
164 (0x00A4)	Concurrent Minimum Run Time	R/W	0	32767	minutes
165 (0x00A5)					
166 (0x00A6)					
167 (0x00A7)					
168 (0x00A8)					
169 (0x00A9)					
170 (0x00AA)					
171 (0x00AB)					
172 (0x00AC)					
173 (0x00AD)					
174 (0x00AE)					
175 (0x00AF)					
176 (0x00B0)	Control Module Input Status	R	*B26	*B26	-
177 (0x00B1)	Auxiliary Input Status	R	*B27	*B27	-
178 (0x00B2)	Control Module/Auxiliary Output Status	R	*B28	*B28	-
179 (0x00B3)	Auxiliary Output Status	R	*B29	*B29	-

**Notes:**

- \*A R/W Specifies readable / writable data, R specifies read only data and W specifies a write only control value.
- \*B The range of certain parameters are dependent upon system options. Consult the following range tables for information regarding the use of these parameters.

Reading bit oriented parameters

The value contained in these parameters is dependant upon the combination of “on” bits (1). Therefore, only the individual status of each bit has meaning, not the value of the parameter.

Setting bit oriented parameters

The value that must be written to these parameters is dependant upon the combination of “on” bits. Therefore, it is necessary to know the current value of the parameter before setting it so that only the bit status you want to update is changed. Otherwise, sending a value derived from only the bit you wish to set, will turn off all other functions related to the other bits in the parameter.

**\*B1**

Parameter Value	Description
Bit0	Orion-M Online
Bit1 - Bit15	Not Assigned

**DO NOT** alter the state of this register. Bit0 is the system online bit and is set by the Orion-M HMI when the unit is ready for operation. Turning off this bit will turn off the system.

The status of this register should be used for information only, as a means of determining if the system is ready for operation.

**\*B2**

Parameter Value	Description
Bit0	Off
Bit1	Hold
Bit2	Continue
Bit3	Restart
Bit4	Resume
Bit5 – Bit15	Not Assigned

**\*B3**

Parameter Value	Description
Bit0	Demand Defrost
Bit1-7	Not Assigned
Bit8	Defrost Off
Bit9	Defrost Cycle Active
Bit10	Fan Delay (PreCool) Active
Bit11-15	Not Assigned

**Note:** Bit0 (demand defrost) will automatically reset after being written to activate defrost. Bits 8-10 are status bits only and will indicate the current defrost status.

**\*B4**

Parameter Value	Description
Bit0	Loop 1 in Manual
Bit1	Loop 2 in Manual
Bit2	Loop 3 in Manual
Bit3	Loop 4 in Manual
Bit4	Loop 5 in Manual
Bit5	Loop 6 in Manual
Bit6	Loop 7 in Manual
Bit7	Loop 8 in Manual
Bit8	Loop 9 in Manual
Bit9	Loop 10 in Manual
Bit10	Loop 11 in Manual
Bit11	Loop 12 in Manual
Bit12	Loop 13 in Manual
Bit13	Loop 14 in Manual
Bit14	Loop 15 in Manual
Bit15	Not Assigned

**Note:** Manual operation may not be available on certain loop controls depending upon their configuration. If manual operation is not available, the bit for the loop will automatically turn off after being set.

When in manual mode, writing to the loop %Out register will adjust the output percentage of the control loop.

**\*B5**

Parameter Value	Description
Bit0	Loop 1 in Autotune
Bit1	Loop 2 in Autotune
Bit2	Loop 3 in Autotune
Bit3	Loop 4 in Autotune
Bit4	Loop 5 in Autotune
Bit5	Loop 6 in Autotune
Bit6	Loop 7 in Autotune
Bit7	Loop 8 in Autotune
Bit8	Loop 9 in Autotune
Bit9	Loop 10 in Autotune
Bit10	Loop 11 in Autotune
Bit11	Loop 12 in Autotune
Bit12	Loop 13 in Autotune
Bit13	Loop 14 in Autotune
Bit14	Loop 15 in Autotune
Bit15	Not Assigned

**Note:** Autotune operation is not supported on all loop controls compatible with the Orion-M or may be unavailable depending upon their configuration. If autotune operation is not available, the bit for the loop will automatically turn off after being set.

When autotune completes normally, the bit for the loop will automatically turn off indicating that tune is complete. To terminate an autotune in progress, turn off the bit for the desired loop.

**\*B6**

Parameter Value	Description
Bit0	System Event 1
Bit1	System Event 2
Bit2	System Event 3
Bit3	System Event 4
Bit4	System Event 5
Bit5	System Event 6
Bit6	System Event 7
Bit7	System Event 8
Bit8	System Event 9
Bit9	System Event 10
Bit10	System Event 11
Bit11	System Event 12
Bit12	System Event 13
Bit13	System Event 14
Bit14	System Event 15
Bit15	System Event 16

**Note:** Not all system events may be available on your system. Event names and functions are defined by system configuration. Consult you system documentation or contact your OEM for information on event use.

**\*B7**

Parameter Value	Description
Bit0	System Event 17
Bit1	System Event 18
Bit2	System Event 19
Bit3	System Event 20
Bit4	System Event 21
Bit5	System Event 22
Bit6	System Event 23
Bit7	System Event 24
Bit8	System Event 25
Bit9	System Event 26
Bit10	System Event 27
Bit11	System Event 28
Bit12	System Event 29
Bit13	System Event 30
Bit14	System Event 31
Bit15	System Event 32

**Note:** Not all system events may be available on your system. Event names and functions are defined by system configuration. Consult you system documentation or contact your OEM for information on event use.

**\*B8**

Parameter Value	Description
0	Profile Not Running
1	Stop Profile
2	Stop profile (All Off)
4	Hold Profile
8	Run/Resume Profile
16	Profile in Autotstart**
32	Profile in Wait For**
64	Profile in Ramp**
128	Profile in Soak**
256	Profile in Guaranteed Soak**

\*\*These values are set by the Orion-M to indicate the operating status of the profile and can not be set directly.

**\*B9**

Parameter Value	Description
1	Profile Advance to Previous Step
2	Profile Advance to Next Step

This parameter only performs its function when the profile is in hold. Once the set function is executed, this parameter automatically resets to zero (0).

**\*B10**

Parameter Value	High Order Byte	Low Order Byte	Description
Range Low	32	32	Profile Name Character (ASCII Table)
Range High	126	126	Profile Name Character (ASCII Table)

See the ASCII character chart in Section 3.1 for the character representation of these values.

**Example**

Read command of registers 18 to 22 from the Orion-M returns the following values:

Register Values: 0x74 53    0x72 6F    0x20 65    0x65 54    0x74 73  
 ASCII Equivalent:    t S            r o            e            e T            t s

Assemble the ASCII characters in order from low to high byte starting with register 18 in order to assemble the profile name: "Store Test". Note that null characters are not used in the profile name. A space (0x20) will be used in place of a null character to maintain the 10 character name length if the profile name is not ten characters long.

**\*B11**

Parameter Value	Range Low	Range High	Description
High Byte	0	99	Year
Low Byte	1	12	Month



**\*B12**

Parameter Value	Range Low	Range High	Description
High Byte	1	31	Day
Low Byte	0	6	Day of Week**

\*\*The days of the week are represented as numbers:  
0=Sun, 1=Mon, 2=Tue, 3=Wed, 4=Thu, 5=Fri, 6=Sat

**\*B13**

Parameter Value	Range Low	Range High	Description
High Byte	0	23	Hour
Low Byte	0	59	Minute

Example

Read command of registers 23 to 25 for profile start time or 26 to 28 for estimated profile stop time from the Orion-M returns the following values:

Register Values:      0x0A 0B      0x04 04      0x0A 1D  
 Decimal Equivalent:    10 11            4 4            10 29

Translating the values into an actual date and time provides a date and time of Thursday November 4, 2010 at 10:29am.

**\*B14**

Parameter Value	Range Low	Range High	Description
High Byte	0	59	Minutes
Low Byte	0	59	Seconds

**\*B15**

Parameter Value	Description
Bit0	Not Waiting
Bit1	Wait For Loop
Bit2	Wait For Monitor
Bit3	Wait For Digital Input
Bit4 - Bit15	Not Assigned

**Note:** Multiple wait for conditions can be active at once, i.e., the profile could be waiting for a combination of loops, monitors and/or digital inputs at the same time.

**\*B16**

Parameter Value	Description
Bit0	Loop/Monitor/Digital Input 1
Bit1	Loop/Monitor/Digital Input 2
Bit2	Loop/Monitor/Digital Input 3
Bit3	Loop/Monitor/Digital Input 4
Bit4	Loop/Monitor/Digital Input 5
Bit5	Loop/Monitor/Digital Input 6
Bit6	Loop/Monitor/Digital Input 7
Bit7	Loop/Monitor/Digital Input 8
Bit8	Loop/Monitor/Digital Input 9
Bit9	Loop/Monitor/Digital Input 10
Bit10	Loop/Monitor/Digital Input 11
Bit11	Loop/Monitor/Digital Input 12
Bit12	Loop/Monitor/Digital Input 13
Bit13	Loop/Monitor/Digital Input 14
Bit14	Loop/Monitor/Digital Input 15
Bit15	Digital Input 16

**Note:** Each bit in the word can represent a wait for condition for more than one input, i.e., Bit0 can be on to indicate it is waiting for loop 1, monitor input 1 or digital input 1.

**\*B17**

Parameter Value	Description
Bit0	Loop 1 Under Profile Control
Bit1	Loop 2 Under Profile Control
Bit2	Loop 3 Under Profile Control
Bit3	Loop 4 Under Profile Control
Bit4	Loop 5 Under Profile Control
Bit5	Loop 6 Under Profile Control
Bit6	Loop 7 Under Profile Control
Bit7	Loop 8 Under Profile Control
Bit8	Loop 9 Under Profile Control
Bit9	Loop 10 Under Profile Control
Bit10	Loop 11 Under Profile Control
Bit11	Loop 12 Under Profile Control
Bit12	Loop 13 Under Profile Control
Bit13	Loop 14 Under Profile Control
Bit14	Loop 15 Under Profile Control
Bit15	Digital Input 16

**\*B18**

Parameter Value	Description
Bit0	Loop 1 Communications Fault
Bit1	Loop 2 Communications Fault
Bit2	Loop 3 Communications Fault
Bit3	Loop 4 Communications Fault
Bit4	Loop 5 Communications Fault
Bit5	Loop 6 Communications Fault
Bit6	Loop 7 Communications Fault
Bit7	Loop 8 Communications Fault
Bit8	Loop 9 Communications Fault
Bit9	Loop 10 Communications Fault
Bit10	Loop 11 Communications Fault
Bit11	Loop 12 Communications Fault
Bit12	Loop 13 Communications Fault
Bit13	Loop 14 Communications Fault
Bit14	Loop 15 Communications Fault
Bit15	Monitor Communications Fault

**\*B19**

Parameter Value	Description
Bit0	Loop 1 Sensor Break
Bit1	Loop 2 Sensor Break
Bit2	Loop 3 Sensor Break
Bit3	Loop 4 Sensor Break
Bit4	Loop 5 Sensor Break
Bit5	Loop 6 Sensor Break
Bit6	Loop 7 Sensor Break
Bit7	Loop 8 Sensor Break
Bit8	Loop 9 Sensor Break
Bit9	Loop 10 Sensor Break
Bit10	Loop 11 Sensor Break
Bit11	Loop 12 Sensor Break
Bit12	Loop 13 Sensor Break
Bit13	Loop 14 Sensor Break
Bit14	Loop 15 Sensor Break
Bit15	Not Assigned

**\*B20**

Parameter Value	Description
Bit0	Monitor 1 Sensor Break
Bit1	Monitor 2 Sensor Break
Bit2	Monitor 3 Sensor Break
Bit3	Monitor 4 Sensor Break
Bit4	Monitor 5 Sensor Break
Bit5	Monitor 6 Sensor Break
Bit6	Monitor 7 Sensor Break
Bit7	Monitor 8 Sensor Break
Bit8	Monitor 9 Sensor Break
Bit9	Monitor 10 Sensor Break
Bit10	Monitor 11 Sensor Break
Bit11	Monitor 12 Sensor Break
Bit12	Monitor 13 Sensor Break
Bit13	Monitor 14 Sensor Break
Bit14	Monitor 15 Sensor Break
Bit15	Not Assigned

**\*B21**

Parameter Value	Description
Bit0	Loop/Monitor Alarm 1
Bit1	Loop/Monitor Alarm 2
Bit2	Loop/Monitor Alarm 3
Bit3	Loop/Monitor Alarm 4
Bit4	Loop/Monitor Alarm 5
Bit5	Loop/Monitor Alarm 6
Bit6	Loop/Monitor Alarm 7
Bit7	Loop/Monitor Alarm 8
Bit8	Loop/Monitor Alarm 9
Bit9	Loop/Monitor Alarm 10
Bit10	Loop/Monitor Alarm 11
Bit11	Loop/Monitor Alarm 12
Bit12	Loop/Monitor Alarm 13
Bit13	Loop/Monitor Alarm 14
Bit14	Loop/Monitor Alarm 15
Bit15	Loop/Monitor Alarm 16

**\*B22**

Parameter Value	Description
Bit0	Loop/Monitor Alarm 17
Bit1	Loop/Monitor Alarm 18
Bit2	Loop/Monitor Alarm 19
Bit3	Loop/Monitor Alarm 20
Bit4	Loop/Monitor Alarm 21
Bit5	Loop/Monitor Alarm 22
Bit6	Loop/Monitor Alarm 23
Bit7	Loop/Monitor Alarm 24
Bit8	Loop/Monitor Alarm 25
Bit9	Loop/Monitor Alarm 26
Bit10	Loop/Monitor Alarm 27
Bit11	Loop/Monitor Alarm 28
Bit12	Loop/Monitor Alarm 29
Bit13	Loop/Monitor Alarm 30
Bit14	Service Alert
Bit15	RESERVED

**\*B23**

Parameter Value	Description
Bit0	Digital Input 0 Alarm
Bit1	Digital Input 1 Alarm
Bit2	Digital Input 2 Alarm
Bit3	Digital Input 3 Alarm
Bit4	Digital Input 4 Alarm
Bit5	Digital Input 5 Alarm
Bit6	Digital Input 6 Alarm
Bit7	Digital Input 7 Alarm
Bit8	Digital Input 8 Alarm
Bit9	Digital Input 9 Alarm
Bit10	Digital Input 10 Alarm
Bit11	Digital Input 11 Alarm
Bit12	Digital Input 12 Alarm
Bit13	Digital Input 13 Alarm
Bit14	Digital Input 14 Alarm
Bit15	Digital Input 15 Alarm

**\*B24**

Parameter Value	Description
Bit0	Redundancy in Manual
Bit1	Redundancy in Auto
Bit2	Redundancy Reset
Bit3	Not Assigned
Bit4	System A Primary Selection
Bit5	System B Primary Selection
Bit6-7	Not Assigned
Bit8	Running System A in Auto
Bit9	Running System A in Manual
Bit10	Running System B in Auto
Bit11	Running System B in Manual
Bit12	Running System A in Fail Mode
Bit13	Running System B in Fail Mode
Bit14	Running System A/B Concurrent
Bit15	Fail Mode System A and B

**Note:** When setting manual mode (Bit0=on, Bit1=off), be sure to also set the current primary system (Bit4 or Bit5). To do this, read the register to get the current status first, set the lower two bits of the word to the desired mode, then write the result back to the Orion-M. If neither bit is set for system A or system B, the Orion-M will default system A as the primary.

Bits8-15 are status only bits and will indicate the current operating condition. If none of the bits are on, redundancy is inactive and neither system A nor system B outputs are on.

**\*B25**

Parameter Value	Description
Bit0	Demand Inhibit
Bit1-7	Not Assigned
Bit8	Product Load Timer Off
Bit9	Product Load Timer On
Bit10-15	Not Assigned

**Note:** Bit0 (demand inhibit) will automatically reset after being written to activate the product load timer. Bit8 and Bit9 are status bits only and will indicate the product load timer status.

**\*B26**

Parameter Value	Description
Bit0	Digital Input 0 On
Bit1	Digital Input 1 On
Bit2	Digital Input 2 On
Bit3	Digital Input 3 On
Bit4	Digital Input 4 On
Bit5	Digital Input 5 On
Bit6	Digital Input 6 On
Bit7	Digital Input 7 On
Bit8 – Bit15	Not Assigned

**\*B27**

Parameter Value	Description
Bit0	Digital Input 8 On
Bit1	Digital Input 9 On
Bit2	Digital Input 10 On
Bit3	Digital Input 11 On
Bit4	Digital Input 12 On
Bit5	Digital Input 13 On
Bit6	Digital Input 14 On
Bit7	Digital Input 15 On
Bit8 – Bit15	Not Assigned

**\*B28**

Parameter Value	Description
Bit0	Digital Output 0 On
Bit1	Digital Output 1 On
Bit2	Digital Output 2 On
Bit3	Digital Output 3 On
Bit4	Digital Output 4 On
Bit5	Digital Output 5 On
Bit6	Digital Output 6 On
Bit7	Digital Output 7 On
Bit8	Digital Output 8 On
Bit9	Digital Output 9 On
Bit10	Digital Output 10 On
Bit11	Digital Output 11 On
Bit12	Digital Output 12 On
Bit13	Digital Output 13 On
Bit14	Digital Output 14 On
Bit15	Digital Output 15 On

\*B29

Parameter Value	Description
Bit0	Digital Output 16 On
Bit1	Digital Output 17 On
Bit2	Digital Output 18 On
Bit3	Digital Output 19 On
Bit4	Digital Output 20 On
Bit5	Digital Output 21 On
Bit6	Digital Output 22 On
Bit7	Digital Output 23 On
Bit8	Digital Output 24 On
Bit9	Digital Output 25 On
Bit10	Digital Output 26 On
Bit11	Digital Output 27 On
Bit12	Digital Output 28 On
Bit13	Digital Output 29 On
Bit14	Digital Output 30 On
Bit15	Digital Output 31 On

- \*C1 The 'wait for setpoint' does not have units of measure. It is a raw numerical value, i.e., it is compared directly to the numerical value of any loop or monitor input selected as a 'wait for' input. The wait for setpoint uses an implied decimal point of 1 for all comparisons regardless of the decimal point configuration of the loop or monitor input.
- \*C2 The units of measure and range of a loop or monitor input is dependant upon the configuration of the input and/or the units of temperature selection (Celsius or Fahrenheit) of the Orion-M. The decimal point position for the loop or monitor input is an implied value based on the configuration of the input. Thus, a register value of 345 can represent an actual process value of 345, 34.5, 3.45 or 0.345 depending upon the decimal point configuration of the loop or monitor input.



## 5.2 Profile Registers

The profile parameters are a separate group of registers that are used to load profiles into the Orion-M. The manner in which the profile steps are configured and sent to the Orion-M is specific and must be followed exactly.

Each profile step consists of 28 data registers. It is recommended that the profile be written one step at a time, using a multiple write command (0x10) to write the data for all 28 registers at once. This allows profiles to be stored as two-dimensional arrays, of which code can be written to simply index through the array step-by-step, and transmit the profile to the Orion-M.

***The first 28 registers of the profile contain specific settings related to the profile. These include autostart settings, the profile name, the length of the profile (number of steps), the loops to profile and guaranteed soak band settings.***

Register Address	Parameter Description	Data *D Type	Range		*F Unit
			*E Low	*E High	
2000 (0x07D0)	Autostart On/Off	R/W	*E1	*E1	-
2001 (0x07D1)	Year/Month for Autostart	R/W	*E2	*E2	-
2002 (0x07D2)	Day/DOW for Autostart	R/W	*E3	*E3	-
2003 (0x07D3)	Time of Day for Autostart	R/W	*E4	*E4	-
2004 (0x07D4)	Profile Name (Chars 1 & 2)	R/W	*E5	*E5	-
2005 (0x07D5)	Profile Name (Chars 3 & 4)	R/W	*E5	*E5	-
2006 (0x07D6)	Profile Name (Chars 5 & 6)	R/W	*E5	*E5	-
2007 (0x07D7)	Profile Name (Chars 7 & 8)	R/W	*E5	*E5	-
2008 (0x07D8)	Profile Name (Chars 9 & 10)	R/W	*E5	*E5	-
2009 (0x07D9)	Total Number of Steps in Profile	R/W	1	99	-
2010 (0x07DA)	Loops not to Profile	R/W	*E6	*E6	-
2011 (0x07DB)	Guaranteed Soak Band Loop 1	R/W	0	32767	PV
2012 (0x07DC)	Guaranteed Soak Band Loop 2	R/W	0	32767	PV
2013 (0x07DD)	Guaranteed Soak Band Loop 3	R/W	0	32767	PV
2014 (0x07DE)	Guaranteed Soak Band Loop 4	R/W	0	32767	PV
2015 (0x07DF)	Guaranteed Soak Band Loop 5	R/W	0	32767	PV
2016 (0x07E0)	Guaranteed Soak Band Loop 6	R/W	0	32767	PV
2017 (0x07E1)	Guaranteed Soak Band Loop 7	R/W	0	32767	PV
2018 (0x07E2)	Guaranteed Soak Band Loop 8	R/W	0	32767	PV
2019 (0x07E3)	Guaranteed Soak Band Loop 9	R/W	0	32767	PV
2020 (0x07E4)	Guaranteed Soak Band Loop 10	R/W	0	32767	PV
2021 (0x07E5)	Guaranteed Soak Band Loop 11	R/W	0	32767	PV
2022 (0x07E6)	Guaranteed Soak Band Loop 12	R/W	0	32767	PV
2023 (0x07E7)	Guaranteed Soak Band Loop 13	R/W	0	32767	PV
2024 (0x07E8)	Guaranteed Soak Band Loop 14	R/W	0	32767	PV
2025 (0x07E9)	Guaranteed Soak Band Loop 15	R/W	0	32767	PV
2026 (0x07EA)	Not Assigned	R/W	-	-	-
2027 (0x07EB)	Not Assigned	R/W	-	-	-

The following 28 registers of the profile contain the data for step 1 of the profile.

Register Address	Parameter Description	Data D Type	Range		*F
			*E Low	*E High	Unit
2028 (0x07EC)	**Step Time Hours (Ramp Rate)	R/W	*E7	*E7	-
2029 (0x07ED)	**Step Time Minutes/Seconds (Dwell Time Hours/Minutes)	R/W	*E8	*E8	-
2030 (0x07EE)	System Events 1-16	R/W	*E9	*E9	-
2031 (0x07EF)	System Events 17-32	R/W	*E10	*E10	-
2032 (0x07F0)	Guaranteed Soak Events	R/W	*E11	*E11	-
2033 (0x07F1)	Wait For Loop	R/W	*E12	*E12	-
2034 (0x07F2)	Wait For Monitor	R/W	*E13	*E13	-
2035 (0x07F3)	Wait For Digital Input	R/W	*E14	*E14	-
2036 (0x07F4)	Wait For Loop/Monitor Setpoint	R/W	-3276.8	3276.7	-
2037 (0x07F5)	Wait For Type/Jump Step	R/W	*E15	*E15	-
2038 (0x07F6)	Jump Count	R/W	0	999	PV
2039 (0x07F7)	Delta Control	R/W	*E16	*E16	-
2040 (0x07F8)	Delta Setpoint	R/W	-3276.8	3276.7	-
2041 (0x07F9)	Loop 1 Setpoint	R/W	-32768	32767	PV
2042 (0x07FA)	**Loop 2 Setpoint (ramp in time)	R/W	-32768	32767	PV
2043 (0x07FB)	**Loop 3 Setpoint (ramp in time)	R/W	-32768	32767	PV
2044 (0x07FC)	**Loop 4 Setpoint (ramp in time)	R/W	-32768	32767	PV
2045 (0x07FD)	**Loop 5 Setpoint (ramp in time)	R/W	-32768	32767	PV
2046 (0x07FE)	**Loop 6 Setpoint (ramp in time)	R/W	-32768	32767	PV
2047 (0x07FF)	**Loop 7 Setpoint (ramp in time)	R/W	-32768	32767	PV
2048 (0x0800)	**Loop 8 Setpoint (ramp in time)	R/W	-32768	32767	PV
2049 (0x0801)	**Loop 9 Setpoint (ramp in time)	R/W	-32768	32767	PV
2050 (0x0802)	**Loop 10 Setpoint (ramp in time)	R/W	-32768	32767	PV
2051 (0x0803)	**Loop 11 Setpoint (ramp in time)	R/W	-32768	32767	PV
2052 (0x0804)	**Loop 12 Setpoint (ramp in time)	R/W	-32768	32767	PV
2053 (0x0805)	**Loop 13 Setpoint (ramp in time)	R/W	-32768	32767	PV
2054 (0x0806)	**Loop 14 Setpoint (ramp in time)	R/W	-32768	32767	PV
2055 (0x0807)	**Loop 15 Setpoint (ramp in time)	R/W	-32768	32767	PV

**\*\*NOTE:** If the profiler is configured for 'ramp rate' rather than 'ramp in time', the loop 1 setpoint becomes the setpoint for all loops in each step. Loop setpoints 2-15 are not used and the values set to the registers will not be used. The 'step time hours' field becomes the ramp rate in degrees/hour for the step and the 'step time minutes/seconds' field becomes the dwell time entry in hours/minutes.

**All remaining steps of the profile follow the same format and data structure as is represented for step one above. Up to the following 2744 registers are used to contain the additional step data of the profile as required for steps 2 through 99. Since few if any profiles will contain the maximum of 99 steps, it is only necessary to write the step data for the number steps used in the profile.**

2056 (0x0808) – 2083 (0x0823)      Profile Step 2 Data Registers  
 2084 (0x0824) – 2111 (0x083F)      Profile Step 3 Data Registers  
 2112 (0x0840) – 2139 (0x085B)      Profile Step 4 Data Registers  
 2140 (0x085C) – 2167 (0x0877)      Profile Step 5 Data Registers  
 2168 (0x0878) – 2195 (0x0893)      Profile Step 6 Data Registers  
 2196 (0x0894) – 2223 (0x08AF)      Profile Step 7 Data Registers  
 2224 (0x08B0) – 2251 (0x08CB)      Profile Step 8 Data Registers  
 2252 (0x08CC) – 2279 (0x08E7)      Profile Step 9 Data Registers

-----  
 through

-----  
 4772 (0x12A4) – 4799 (0x12BF)      Profile Step 99 Data Registers

**Notes:**

\*D      R/W Specifies readable / writable data.

*Once a profile is started, changes made to the profile data registers will not take affect on the operating profile. The profile must be stopped and restarted for changes to take affect.*

\*E1

Parameter Value	Description
0	Autostart Off
1	Autostart by Date
2	Autostart by Day

\*E2      See note \*B10 in Section 5.1 for information on the range of this parameters.

\*E3      See note \*B11 in Section 5.1 for information on the range of this parameters.

\*E4      See note \*B12 in Section 5.1 for information on the range of this parameters.

\*E5      These parameters contain data which represent up to ten ASCII characters in order to display the name of the currently loaded (or operating) profile in the Orion-M.

*See note \*B9 in Section 5.1 for information on the range of these parameters.*

**\*E6**

Parameter Value	Description
Bit0	Do not Profile Loop 1
Bit1	Do not Profile Loop 2
Bit2	Do not Profile Loop 3
Bit3	Do not Profile Loop 4
Bit4	Do not Profile Loop 5
Bit5	Do not Profile Loop 6
Bit6	Do not Profile Loop 7
Bit7	Do not Profile Loop 8
Bit8	Do not Profile Loop 9
Bit9	Do not Profile Loop 10
Bit10	Do not Profile Loop 11
Bit11	Do not Profile Loop 12
Bit12	Do not Profile Loop 13
Bit13	Do not Profile Loop 14
Bit14	Do not Profile Loop 15
Bit15	Not Assigned

**\*E7**

The range and function of this parameter is based on the profile mode selection.

Profiler configured for 'Ramp in Time' (Step Time)

Profiler Mode	Range Low	Range High	Description
Ramp in Time	0	999	Hours
Ramp Rate	0	2000	Deg/Hr

**\*E8**

The range and function of this parameter is based on the profile mode selection.

Profiler configured for 'Ramp in Time' (Step Time)

Parameter Value	Range Low	Range High	Description
High Byte	0	59	Minutes
Low Byte	0	59	Seconds

Profiler configured for 'Ramp Rate' (Dwell Time)

Parameter Value	Range Low	Range High	Description
High Byte	0	127	Hours
Low Byte	0	59	Minutes

\*E9 See note \*B5 in Section 5.1 for information on the range of this parameters.

\*E10 See note \*B6 in Section 5.1 for information on the range of this parameters.

\*E11

Parameter Value	Description
Bit0	Guaranteed Soak Loop 1
Bit1	Guaranteed Soak Loop 2
Bit2	Guaranteed Soak Loop 3
Bit3	Guaranteed Soak Loop 4
Bit4	Guaranteed Soak Loop 5
Bit5	Guaranteed Soak Loop 6
Bit6	Guaranteed Soak Loop 7
Bit7	Guaranteed Soak Loop 8
Bit8	Guaranteed Soak Loop 9
Bit9	Guaranteed Soak Loop 10
Bit10	Guaranteed Soak Loop 11
Bit11	Guaranteed Soak Loop 12
Bit12	Guaranteed Soak Loop 13
Bit13	Guaranteed Soak Loop 14
Bit14	Guaranteed Soak Loop 15
Bit15	Not Assigned

\*E12

Parameter Value	Description
Bit0	Wait For Loop 1
Bit1	Wait For Loop 2
Bit2	Wait For Loop 3
Bit3	Wait For Loop 4
Bit4	Wait For Loop 5
Bit5	Wait For Loop 6
Bit6	Wait For Loop 7
Bit7	Wait For Loop 8
Bit8	Wait For Loop 9
Bit9	Wait For Loop 10
Bit10	Wait For Loop 11
Bit11	Wait For Loop 12
Bit12	Wait For Loop 13
Bit13	Wait For Loop 14
Bit14	Wait For Loop 15
Bit15	Not Assigned

**\*E13**

Parameter Value	Description
Bit0	Wait For Monitor 1
Bit1	Wait For Monitor 2
Bit2	Wait For Monitor 3
Bit3	Wait For Monitor 4
Bit4	Wait For Monitor 5
Bit5	Wait For Monitor 6
Bit6	Wait For Monitor 7
Bit7	Wait For Monitor 8
Bit8	Wait For Monitor 9
Bit9	Wait For Monitor 10
Bit10	Wait For Monitor 11
Bit11	Wait For Monitor 12
Bit12	Wait For Monitor 13
Bit13	Wait For Monitor 14
Bit14	Wait For Monitor 15
Bit15	Not Assigned

**\*E14**

Parameter Value	Description
Bit0	Wait For Digital Input 1
Bit1	Wait For Digital Input 2
Bit2	Wait For Digital Input 3
Bit3	Wait For Digital Input 4
Bit4	Wait For Digital Input 5
Bit5	Wait For Digital Input 6
Bit6	Wait For Digital Input 7
Bit7	Wait For Digital Input 8
Bit8	Wait For Digital Input 9
Bit9	Wait For Digital Input 10
Bit10	Wait For Digital Input 11
Bit11	Wait For Digital Input 12
Bit12	Wait For Digital Input 13
Bit13	Wait For Digital Input 14
Bit14	Wait For Digital Input 15
Bit15	Not Assigned

**\*E15**

This parameter is split into upper and lower bytes. The high byte of the word is for setting the 'wait for' type while the lower byte contains the step number for jump step operation.

High Byte (0x00XX)

Parameter Value	Description
0	Auto
1	Wait for Rising
2	Wait for Falling

Low Byte (0xXX00)

Parameter Value	Description
1 - 99	Jump Step

**Important:** *If the jump step is set to a value greater than the number of steps in the profile that was loaded, the Orion-M will jump to that step if the recycle count for the step is greater than zero, and attempt to execute that step based on the data contained in the step whether it is valid or not.*

**\*E16**

Parameter Value	Description
Bit0	Enable Delta Control for Loop 1
Bit1	Enable Delta Control for Loop 2
Bit2	Enable Delta Control for Loop 3
Bit3	Enable Delta Control for Loop 4
Bit4	Enable Delta Control for Loop 5
Bit5	Enable Delta Control for Loop 6
Bit6	Enable Delta Control for Loop 7
Bit7	Enable Delta Control for Loop 8
Bit8	Enable Delta Control for Loop 9
Bit9	Enable Delta Control for Loop 10
Bit10	Enable Delta Control for Loop 11
Bit11	Enable Delta Control for Loop 12
Bit12	Enable Delta Control for Loop 13
Bit13	Enable Delta Control for Loop 14
Bit14	Enable Delta Control for Loop 15
Bit15	Not Assigned


**\*F** The unit PV means that the unit of the parameter is the same as the unit of PV (the loop/monitor input configuration).

**Use caution when loading a profile to the Orion-M.** *You must insure that the decimal point scaling and units of measurement in the profile match the loop setting. Loading a profile with a temperature setpoint of 80 will result in a control temperature of 80°F if the Orion-M is in degrees Fahrenheit. However, if the Orion-M is set for degrees Centigrade, it will result in a control temperature of 80°C (176°F).*

**5.2.1 Starting a Profile on the Orion-M**

Once a profile has been loaded into the Orion-M, two control parameters must be set in order to start the profile. These are the profile start step (14) and the profile control (15) registers. The profile start step register must first be set to the step number that the profile is to start on. Note that this must be a value from 1 to the last step of the profile.

Once this parameter has been set, the profile can be started by setting the profile control register to a value of eight (8). This will put the profile into run mode and it will begin operation on the step number designated in the profile start step parameter. Note that once the profile is started, the profile start step register (14) will reset to zero. This forces you to set it each time you want to start a profile. A profile will not start unless this parameter is set. This insures that each time a profile is started, it is starting on the proper step number that you designate.

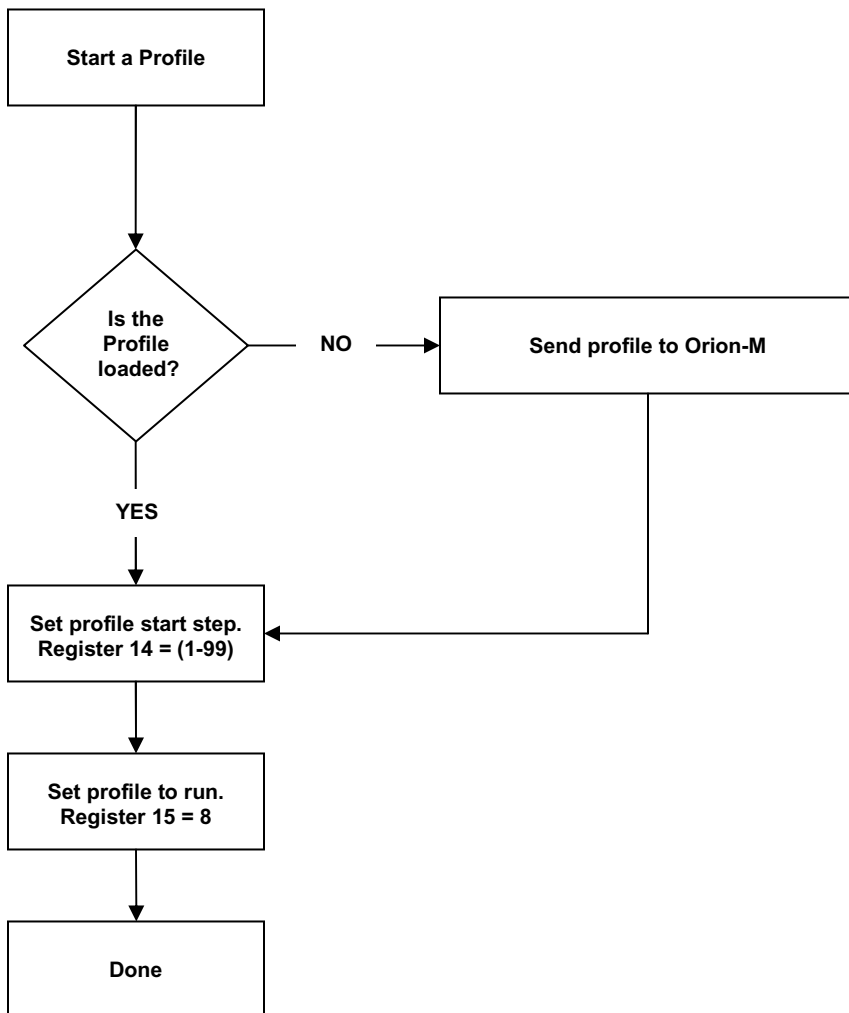



## Appendix

## Terms and Definitions

**address** – A unique designator for a location of data or a controller that allows each location or controller on a single communications bus to respond to its own message.

**ASCII** (pronounced AS-KEY) – American Standard Code for Information Interchange. A universal standard for encoding alphanumeric characters into 7 or 8 binary bits.

**Asynchronous** – Communications where characters can be transmitted at an unsynchronized point in time. In other words, it can start and stop anytime. The time between transmitted characters may be of varying lengths. Communication is controlled by “start” and “stop” bits at the beginning and end of each character.

**Baud** – Unit of signaling speed derived from the number of events per second (i.e., bits per second).

**Baud rate** – The rate of information transfer in serial communications, measured in bits per second.

**Binary** – Number based system where only two characters exist, 0 and 1. Counting is 0, 1, 10, 11...

**Bit** – Derived from “Binary digit”, a one or zero condition in the binary system.

**Byte** – A term referring to eight associated bits of information, sometimes called a “character”.

**Character** – Letter, numeral, punctuation, control figure or any other symbol contained in a message. Typically this is encoded in one byte.

**Communications** – The use of digital computer messages to link components. (See serial communications and baud rate)

**Converter** – This device will convert from one hardware interface to another such as from EIA-232 to EIA-485. The converter may be transparent to the software, which means you do not have to give any special considerations to software programming.

**CRC** – When data is corrupted during transmission, a method is used to return the data to its correct value. This can be accomplished through several methods: parity, checksum and CRC (cyclic redundancy checksum) are three of these. Cyclic Redundancy Checksum is an error-checking mechanism using a polynomial algorithm based on the content of a message frame at the transmitter and included in a field appended to the frame. At the receiver, it is then compared with the results of the calculation that is performed by the receiver.

**Data** – The information that is transferred across the communications bus. This may be a setpoint, setup parameter, or any character. This information is transferred to an address or register.

**DB-9** – A standardized connector shaped like the letter “D” when viewed on edge. This connector has 9 contacts. It is utilized on most IBM AT compatible PCs as the serial port.

**Decode** – This is the reverse of encode. When a piece of data has information embedded in it, decode is to extract that information. Example: to extract an “A” from 01000001.

**Duplex** – The ability to send and receive data at the same time. “To listen and talk at the same time.”

**EIA-232** – Electronic Industries Association developed this standard hardware interface to allow one device to talk to another device in full duplex mode. This method uses a differential voltage between one wire and ground. Also called an unbalanced system since the ground wire carries the sum of current of all lines. Transmission is limited to about 50 feet.

**EIA-485** – Electronic Industries Association developed this standard hardware interface to allow up to 32 devices to be on a bus at one time. This method uses a differential voltage between two wires. Also called a balanced system since each wire carries the same current value. This has the advantage of being immune to outside electrical disturbances.

**EIA/TIA -232 and -485** – Data communications standards set by the Electronic Industries Association and Telecommunications Industry Association. Formerly referred to as RS- (Recommended Standard). (See EIA-232 and EIA-485)

**Electronic Industries Association (EIA)** – An association in the US that establishes standards for electronics and data communications.

**Encode** – To embed information into a piece of data. This is the reverse of decode. Example: let 01000001 stand for an “A”.

**Error Correction** – When an inconsistency is in the data, a method is used to detect and/or return the data to its correct value. This can be done through several methods, parity, checksum and CRC (cyclic redundancy checksum) area three of these.

**Even** – This term is used with parity. See parity.

**Firmware** – Instruction or data stored in an IC (integrated circuit) or on a read only disk. This data is programmed once and cannot easily be changed as software can.

**Full Duplex** – Full is used to mean the duplex’s full capability. The ability to send and receive data at the same time. The same as duplex.

**GPIB** – See IEEE488

**Half Duplex** – The ability to send or receive data, but not at the same time. “To listen or talk, but not both at the same time.”

**Handshake (Handshaking)** – Exchange of predetermined signals between two devices establishing a connection. Using extra wires or software signals to coordinate communications, signals can be sent to tell the transmitter the current status of the other device receiver. Example: Are you busy or are you ready?

**Hex or Hexadecimal** – Number based system where sixteen characters exist, 0 to 9, A to F. Counting is 0..9,A,B,C...

**Integer** – Two bytes make an integer. This contains 16 bits. An integer can represent a decimal value of -32768 to 32767.

**Logic Level** – A voltage measurement system where only two stable voltage values exist. Example: 0v and 5V, or -3v and +3v.

**Mark** – Represents the transmission of data bit logic 1 (see logic level). Usually this is the most negative voltage value in serial communications.

**Master** – The device on the bus that controls all communications. Only the master can initiate conversation.

**Modbus** – A software protocol developed by Gould Modicon (now AEG) for process control systems. No hardware interface is defined. Modbus is accessed on the master/slave principle, the protocol providing for one master and up to 247 slaves. Only the master can initiate a transaction. This is a half duplex protocol.

**Network** – When two or more devices share communication lines, the devices are “networked”.

**Node** – A point of interconnection to a network.

**Noise Immunity** – The ability of communication lines to ignore electrical noise generated in the lines by nearby magnetic and electrostatic fields.

**Odd** – This term is used with parity. See parity.

**Parallel** – Communication using this method, transfers eight bits or one byte at a time over eight data wires and one ground wire. This method is eight times faster than using serial but utilizes more hardware.

**Parity** – A bit is assigned at the beginning of a byte to stand for parity. When the ‘1’ bits are counted, the number will be even or odd. A parity bit is used to ensure that the answer is always even if even parity or odd if odd parity. If the receiving end counts the ‘1’ bits and the sum is not the same odd or even, an error is generated. Parity is used to detect errors caused by noise in data transmission.

**Protocol** – A set of rules for communication. This will specify what method to transfer information, packet size, information headers and who should talk when. It is used to coordinate communication activity.

**Receive** – To accept data sent from another device. The device that receives the data is the receiver.

**Register** – An area of memory that provides temporary storage of digital data.

**Slave** – A device that only responds to commands. This device never starts communication on it’s own. Only the Master can do this. (See Master)

**SCADA** – Supervisory Control and Data Acquisition

**Serial** – To process something in order. First item, second item, etc.

**Serial Communications** – A method of transmitting information between devices by sending all bits serially (see serial) over a single communication channel.

**Software** – Information of data or program stored in an easily changeable format. (RAM, Floppy Disk, Hard Disk)

**Space** – Represents the transmission of a data bit logic 0 (see logic level). Usually this is the most positive voltage value in serial communications.

**Start Bit** – A binary bit or logic level that represents when the serial data information is about to start (at the beginning of a character or byte). This voltage level is positive.

**Stop Bit** – A binary bit or logic level that represents when the serial data information is complete (at the end of a character or byte). This voltage level is negative.

 
**Synchronous** – When data is transmitted on a data line and a clock signal is used on another line to determine when to check the data line for a logic level. This clock is said to “synchronize” the data.

**Transmit** – To send data from one device to another. The device that sends the data is the transmitter.

**Word** – Two bytes make a word. This contains 16 bits. A word can represent a decimal value of 0 to 65535.

## Order Matrix:

### FDC Orion-M -



#### 1. Graphic User Interface (GUI) & Control Module (CM)

- 2: FDC-2107i Windows CE 7" iSeries Color Touch Screen
- 3: FDC-2110i Windows CE 10" iSeries Color Touch Screen

##### Control Module (CM) includes the following components:

FC5A-D16RS1: Control Module CPU with on-board 8-digital input (24Vdc) and 8-digital outputs (6-relay/2TTL)  
 FC4A-PM64: 64KB Memory Card  
 FC4A-PT1: Real Time Clock  
 FC4A-HPC3: Modbus port (connect loop controls and monitor point cards to CM)  
 CA2011-8A: Cable from FC5A CPU to display (8ft)  
 GE1A-C10MA110 / SR2P-06: Reset Timer and socket (DIN Rail)  
 2GB SD Memory Card (holds Orion-Mi application software)  
 2GB High Capacity USB Memory Stick (3VDC)  
 PS5R-SD24: Power Supply  
 (Input 85-264Vsc/Output 24Vdc 60 Watt (2.5 amp))

#### 2. Graphic User Interface (GUI) Application Software

- 2: FDCi: standard iSeries software for 7" and 10" displays
- 3: FDSR: SR iSeries software for 7" and 10" displays

#### 3. Control Module (CM) Application Software (loop control type)

- 1: **FD10:** CM software for FDC 100 Series
- 2: **FD30:** CM software for FDC 300 Series (note 2)
- 3: **HWSL:** CM software for Honeywell 2500/3200 (note 2)
- 4: **HWDL:** CM software for Honeywell 3500 (note 3)
- 5: **WTSD:** CM software for Watlow SD
- 6: **WTPM:** CM software for Watlow PM
- 7: **DHPL:** CM software for Danaher West/Partlow Plus
- 8: **YKGS:** CM software for Yokogawa UT Green Series
- 9: **FDSR:** CM software for FDC 300 Series Orion-M SR (note 2)

##### Software - Future Release

- YKXX:** CM software for Yokogawa UT Advanced
- ER20:** CM software for Eurotherm 2000 Series
- ER30:** CM software for Eurotherm 3000 Series
- ERM8:** CM software for Eurotherm Mini 8 Series

#### 4. Monitor Inputs (Note 2) (DIN Rail Mount – serial connection to CM)

- 0: None
- 1: **IO-8TCS:** (8-thermocouple input module - isolated)
- 2: **IO-6RTD:** (6-RTD input module)
- 3: **IO-8AIIS:** (8- input module 0-20 / 4-20mA - isolated)
- 4: **IO-8AIVS:** (8-analog input 0-10 / 2-10Vdc—isolated)
- 9: **Special**

##### Combination Monitor Input Modules (maximum of 2 & 15 points)

- |                   |                |
|-------------------|----------------|
| A: Item 1 / qty 2 | F: Items 1 & 3 |
| B: Item 2 / qty 2 | G: Items 1 & 4 |
| C: Item 3 / qty 2 | H: Items 2 & 3 |
| D: Item 4 / qty 2 | I: Items 2 & 4 |
| E: Items 1 & 2    | J: Items 3 & 4 |

**Note 1:** CM will support up to 7 expansion modules (the monitor point input module is not a CM expansion module).

**Note 2:** Maximum of 2 monitor input cards monitoring a maximum of 15 monitor card inputs. With specific CM software, the loop control's input #2 may be configured as monitor points. System maximum of 15 monitor points made up of loop control input #2, inputs of monitor cards or combination of both.

**Note 3:** Dual loop HW3500 is limited to 7 controls maximum (14 loops).

#### 6. Digital Inputs (Note 1) (DIN Rail Mount – plug into CM)

- 0: None
- 1: **FC4A-N08B1:** (8-digital input card (24Vdc))
- 2: **FC4A-N08A11:** (8-digital input card (120Vac))

Note: The above optional digital inputs (DI) are in addition to the eight 24Vdc digital inputs that are standard on the CM; system maximum of 16 digital inputs.

#### 4. Digital Outputs (Note 1) (DIN Rail Mount – plug into CM)

- 0: None
- 1: **FC4A-T08S1** (8-digital output– TTL 24Vdc (source))\*
- 2: **FC4A-R081** (8-digital output - Relay (240Vac 2-amps))
- 3: **FC4A-T16S3** (16-digital output– TTL 24Vdc (source))\*
- 4: **FC4A-R161** (16-digital output - Relay (240Vac 2-amps))

##### Combination DO modules (maximum of 24 optional DO)

- |                                |                |
|--------------------------------|----------------|
| A: Item 1 / qty 2              | G: Items 1 & 3 |
| B: Item 1 / qty 3              | H: Items 1 & 4 |
| C: Item 2 / qty 2              | J: Items 2 & 3 |
| D: Item 2 / qty 3              | K: Items 2 & 4 |
| E: Item 1 qty 2 & Item 2 qty 1 |                |
| F: Item 1 qty 1 & Item 2 qty 2 |                |

\*The terminal blocks for all of the above are inclusive except for the FC4A-T16S3, 24Vdc output card, whose terminal block is a separate component, part number FC4A-PMPC20P. This terminal block is included as a separate component when specifying this output card.

Note: The above optional digital outputs (DO) are in addition to the 8 DO that are standard on the CPU (6 relay & 2 TTL 24Vdc); maximum of 32 DO.

#### 7. Analog I/O (Note 1) (DIN Rail Mount – plug into CPU)

- 0: None
- 1: **1 A-IO card** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 2: **2 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 3: **3 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 4: **4 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 5: **5 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 6: **6 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)
- 7: **7 A-IO cards** **FC4A-L03A1** (4-20mA or 0-10Vdc IO)

Note: Each I/O card has qty 2 Remote Setpoint input and quantity 1 Retransmission output configurable for PV,SP or %Out

#### 8. Serial Communication (Note 1) (DIN Rail Mount – plug into CM)

- 0: None
- 1: **FC5A-SIF4** (RS485 Modbus RTU port (slave))\* (port 3)
- 2: **FC5A-SIF2** (RS232 port for Barcode Reader) \*\* (port 4)

**Note: If Item 2 is specified, Item 1 is included and must be counted in the total number of modules.**

\*RS485 Modbus RTU port allows R/W access by FDC EnVision & 3rd party software.  
 \*\*Bar Code Reader input is compatible for serial based barcode readers. System will accept up to 16 characters of data from the bar code scanner. Data from the bar code reader will be inserted as operator events in the Historical Data File; there is no limit to the number of events that may be entered manually or with a bar code scanner.

#### 9. Special

- 0: None
- 1: **CM Assembled & wired on DIN Rail**

## NOTES: SCADA (Supervisory Control & Data Acquisition)

FDC-Orion-M iSeries Graphic User Interface (GUI) is available in 7" and 10" color touch screens. The GUI provides a full SCADA feature set providing ease of use, data acquisition, alarm manager, operator audit trail, multi-level Security with user rights, LAN connections and more.

### The GUI provides ease of configuration, use & support.

- System Configuration for loop, monitor point, alarm, digital input & outputs assignment / logic, Help language selection and more, all without an external device or PC.
- Loop Views: multiple view Loop and/or Monitor Points in single or All View; Trend, Bar Graph and Digital views also available
- Profile: Virtually unlimited number of profiles with each profile having up to 99 steps with up to 32 events.
- File Management: View, print, copy/move Profile, Alarm, Historical Data (data log files) and operator audit trial files. File transfer via LAN features or USB flash memory.
- Support: View loop & digital IO status, force loop & digital outputs and more.
- Print: Print directly from GUI via USB port
- LAN: Remote Access & touch screen operation (VNC), email/SMS on alarm, email historical, alarm & audit trail files on-demand, Web Page (view only) and FTP of historical data files automatically or on-demand.

### Data Acquisition:

- Data log up to 15 control loops (PV, SP & % out) & 8 Monitor Points (specific dual input loop controls may allow up to 30 PV inputs)
- Log interval: configurable 6 seconds to 31 minutes with configurable number of days to auto start & name next file (1 to 31 days).
- File Start/Stop: Configurable; operator on-demand, on system boot, profile ramp-soak start/end or digital inputs
- File Interval: Once started a data log file is configurable to auto end and start new file with the same name as previous file with an appended time/date name. Configurable time interval is from 1 to 31 days.
- File name: Operator entered file name, batch & lot number or if running a profile, file name same as profile name. (all file names appended with date-time to file name)
- Operator Comments/Events: Unlimited operator comments/events linked to each file entered manually or via Bar Code Scanner.
- Digital Signatures: full support for user based digital signatures for each data file (data encryption).
- Historical Data File: View & print the data directly from the display (auto scale on X & Y axis with each channel selectable for right or left axis values), from a PC after data is copied/moved via LAN (FTP or email) or USB Flash Memory card provided.

## NOTES: Monitor Inputs – Optional

### Monitor Inputs:

The FDC-IO modules are DIN rail mount 8-channel isolated thermocouple, RTD (6-channel) or 8-channel linear mA or Vdc input modules. Each monitor point is configurable for Alarm setpoints and segment advance "wait for" logic (SP logic & loop Delta function).

2 Monitor input cards may be specified. Orion system configuration allows up to 15 monitor points including input #2 of specific loop controls.

Information on the FDC-IO modules may be found at the following link: [http://www.futuredesigncontrols.com/FDC-IO\\_Modules.html](http://www.futuredesigncontrols.com/FDC-IO_Modules.html)

## NOTES: Power Supply – Standard (DIN Rail Mount)

### Power Supply:

DIN Rail mount 24VDC 60 watt power supply (2.5-amps) to power the FDC-2107i or 2110i GUI, control module CPU, optional IO and FDC-IO monitor input modules.

## NOTES: Configurable Control Logic

**Ramp/Soak Profiles (Global Profile configurable as Time or Ramp Rate based):** The FDC-Orion-M provides for a virtually unlimited number of profiles each with up to 99 steps and up to 32 configurable events per step. Step Advance, Hold, Stop, and other "Wait For" logic per step is standard. The "Wait For" step advance logic includes digital inputs, loop / monitor points achieving a "wait for SP" and Delta SP logic.

### Configurable Loop Control:

Each of the DIN control loops may be configured via the operator interface as single loop controls or as components in Cascade or %RH values. Each control loop is configurable to run Ramp/Soak profiles or as steady state controls (non-profile) per profile.

### Alarm Configuration:

#### System Alarms

System Alarms include loss of communication with loop & monitor points, configurable call back, audible and more; may be mapped to one of the standard or optional digital outputs

#### DIN Control Loop Alarms (a maximum of 30 alarms for loop & monitor)

The loop controls (up to 15) may have up to 30 alarms configured per loop. The alarms may be configured as soft/audible, latching or not, inhibit logic and to defeat any digital output. Alarms may be mapped to one or more of the standard or optional digital outputs (maximum of 32 digital outputs). Alarm types include:

- Process, Deviation, Percent Output and Rate of Change (ROC) low, high or both

#### Monitor Input (a maximum of 30 alarms for Loop & monitor)

Each channel may be configured with Process or Rate of Change (ROC), soft/audible, latching or not, inhibit and/or to defeat any digital output. Alarms may be mapped to one or more of the standard or optional digital outputs (max of 32 digital outputs)

### Digital IO Configuration

Digital Outputs (DO): CPU includes 8-digital output (6-relay & 2-TTL) with optional 8 & 16 output cards (24VDC or relay); max of 32 DO.

DO are configurable as:

- Loop, monitor point or digital input alarms
- Event outputs used in ramp soak profiles
- Event output for profile status: run, hold & step change
- Event outputs as a result of Digital Inputs
- Configurable cycle times to pulse an output or no cycle - on 100%
- Configurable time delay to automatically turn DO off
- Configure DO with counter & alarm message

Digital Inputs (DI): CPU includes 8-digital inputs with optional 8- digital input card for maximum of 16 digital inputs.

DI may be configured:

- Configurable time delay (timers)
- System Run
- Alarm Input
- Data Acquisition start and stop
- Profile functions; start, stop (all off), hold, advance previous/next step
- Defeat Logic; disable specific or groups of DO
- Disable Communication to loop controls SP or All components
  - SP communication disabled: SP values may be changed at loop controls while still monitor & data log all values.
  - All communication disabled: SP values may be changed at loop controls but no loop, monitor alarms or data log occurs.

## NOTES: Analog I/O – Optional (DIN Rail Mount to CM)

### Analog I/O (Input/Output):

Remote Setpoint: Cards accept two 4-20mA or 2-10Vdc inputs to be transmitted as SP values via the serial link to specific DIN controllers.

Retransmission: Cards have one 4-20mA or 0-10VDC signals configurable as PV, Setpoint or % Out values from specific DIN controls

Maximum number of cards is 7: 14 remote setpoint inputs and 7 retransmitted PV, Setpoint or %Output values.



## NOTES: System Configuration

Orion-M has an embedded configuration program and normal runtime allowing full customization & configuration directly from the GUI. Simple Import/Export function allows complete configurations to quickly & easily imported to other Orion-M iSeries control systems.

### Configuration Program allows:

- Number of Loop Controls, Monitor Points, Digital Inputs, Digital Outputs and Analog I/O.
- Assign Tag Names to Loop, Monitor, Alarms, System Events, Digital Input & Outputs
- Profile Setup: Time or Ramp Rate based Ramp configuration.
- Main View: Select Start up/Main View (home page)
- Menu System: Enable/disable specific Menu items & functions not required or desired for the application
- System Event Configuration to allow multiple DO from one Event

### Runtime Configuration allows:

Profile Power Recovery logic, Setpoint Limits, Alarm Settings, LAN settings (VNC, Modbus, web server, email, FTP, alarm email / text), Barcode Reader, degrees C/F, DO counter, Date/Time, Help/Voice language selection, I/O mapping & logic, Monitor Point offset, Analog I/O configuration, export/import configuration & more.

## NOTES: Loop Controls (Serial connection to CM)

### Control Module (CM) Software for Loop Controls:

The software allows connection up to 15 loop controls and one FDC-IO monitor input module (8-T/C, 6-RTD or 8-mA or VDC inputs). (specific dual input loop controls may allow up to 30 PV inputs)

The software and appropriate loop control model is identified by the character description on the part number matrix. Note that the appropriate software must be specified for the Control Module memory.

The FD30 & FD10 CM software allows connection to Future Design Controls 300 & 100 Series DIN controllers. Both Series are available in 1/32, 1/16, 1/8 and 1/4 DIN sizes with DIN rail mounting available for both the 1/32 and 1/16 DIN sizes. Information on these Series controllers may be found at the following links:  
<http://www.futuredesigncontrols.com/300.HTM>  
<http://www.futuredesigncontrols.com/100.HTM>

CM software supporting Honeywell, Watlow, Danaher , Eurotherm, Yokagawa and other controller products are, or will be available. Refer to the specific FDC brochure available for each control brand as there may be limitations depending upon control brand.

## OPTIONS: Manual, Screen Covers and USB/Ethernet Cables

### Printed Operators Manual

<u>Part Number</u> ( <a href="#">FDC-Orion-M_iSeries_Operators_Manual.pdf</a> )	<u>Price</u>
FDC-Orion-M Operators Manual	\$30.00

### Printed Configuration Manual

<u>Part Number</u> ( <a href="#">FDC-Orion-M_iSeries_Config_Manual.pdf</a> )	<u>Price</u>
FDC-Orion-M Configuration Manual	\$30.00

### Color Touch Screen Protective Screen Covers (FDC-210\_Series\_Protective\_Sheet.pdf)

	<u>Price</u>
PS2107 FDC-2107 7" Display / 5 per pack	\$30.00
PS2110 FDC-2110 10" Display / 5 per pack	\$30.00

### USB Cables & Accessories

	<u>Price</u>
IStick-Panel USB Panel Mount Adapter	\$40.00
IStick-4X-CVR USB Panel Mount Adapter-Nema4x	\$75.00

### Ethernet Cables

<u>Part Number</u>	<u>Price</u>	<u>Part Number</u>	<u>Price</u>
CA-CAT5E-Patch-7ft	\$10.00	CA-CAT5E-Crossover-7ft	\$10.00
CA-CAT5E-Patch-25ft	\$15.00	CA-CAT5E-Crossover-25ft	\$15.00
CA-CAT5E-Patch-50ft	\$25.00	CA-CAT5E-Patch-100ft	\$45.00

## NOTES: Serial Communications (Serial connection to CM)

### RS485 Modbus RTU (slave) and RS232 (barcode input) modules

#### RS485 Modbus RTU input module:

The RS485 module allows 3rd party software / hardware R/W access to specific registers within the Control Module. Contact Future Design Controls technical support for the register/address listing for specific software versions.

#### RS232 Serial input for barcode readers:

The RS232 serial input option allows the Orion to receive up to 16 characters from a standard compatible serial Barcode reader. Data from the bar code reader will insert operator events into the historical data file; there is no limit to the number of events that may be entered manually or with a bar code scanner.

Note: If Serial Communication is used the RS485 module must be included; i.e. if bar code reader is used both the RS485 and the RS232 (used for bar code reader) modules must be specified.

## NOTES: Control Module (CM) components, I/O & other options

### USB Memory Stick:

A high capacity USB Memory Card is provided to facilitate file transfer to and from the FDC-2107/2110 display. The USB memory card power requirement is 3VDC matching the display's USB port 3VDC power supply (note: many USB memory sticks require 5VDC and will not work with the FDC-2107/2110 display)

### CM: CM components includes the following hardware:

- FC5A-D16RS1: CPU (IO includes 8-digital output & 8 input (DO 6-relay & 2-TTL 24VDC) & (DI 8 24VDC)
- CA2011-8A: Cable (8ft) to connect CPU to GUI
- FC4A-PM64: CPU memory card  
(CM application software pre-installed)
- FC4A-PT1: CPU Real Time Clock (RTC)
- FC4A-HPC3: Modbus port to connect control module to loop and monitor input devices
- PS5R-SD24: 24VDC power supply for Display & CPU
- USB Memory: high capacity USB memory stick (3VDC)
- GE1A-C10MA110/SR2P-06: Reset Timer with mounting Socket

### Optional Digital I/O (plugs into CPU) (\*note 1)

- FC4A-T16S3: 16-digital output card (24Vdc source)
- FC4A-R161: 16-digital output card (relay 240Vac 2A)
- FC4A-T08S1: 8-digital output card (24Vdc source)
- FC4A-R081: 8-digital output card (relay 240Vac 2A)
- FC4A-N08B1: 8-digital Input card (24Vdc)
- FDC4-N08A11: 8-digital input card (120Vac )

### Maximum Digital IO Summary for CPU & optional IO modules

- Digital Output: 32 Digital Outputs  
CPU 8-digital out (6-relay and 2-transistor)  
Optional 24-digital out (relay or 24Vdc)
- Digital Inputs: 16 Digital Inputs  
CPU 8-digital in (24Vdc)  
Optional 8-digital in (120Vac or 24Vdc)

### Optional Analog I/O (Remote SP & Retransmission) (\*note 1)

- FC4A-L03A1 Two mA or Vdc inputs & one mA or Vdc out

### Optional Serial Communication Modules (\*note 1)

- FC5A-SIF2: RS232 port for Barcode Reader
- FC5A-SIF3: RS485 Modbus RTU (slave)

### Optional Monitor Point 8-channel (6-channel RTD) input module

System supports one Monitor Input Module (serial connection to CM):

- IO-8TCS: 8-thermocouple input module (isolated)
- IO-6RTD: 6-RTD input module
- IO-8AIIS: 8- input module 0-20 / 4-20mA (isolated)
- IO-8AIVS: 8-analog input 0-10 / 2-10VDC (isolated)

\*Note 1: CM will support up to 7 expansion modules.  
(The Monitor Point input modules are not a CM expansion module)

## **FUTURE DESIGN SOFTWARE LICENSE FOR FDC Orion-M Control System**

Future Design Controls Windows CE based Orion display and Control Module (Idec PLC) software (listed as "SOFTWARE" in this document) is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE is licensed at no charge to the end user when all components, including but not limited to the Control Module (Idec PLC components) and CE Color Touch Screen display are purchased from Future Design Controls. All ownership and rights remain with Future Design Controls.

### **I. LICENSE GRANT.** This LICENSE grants you the following rights:

A. You may use Future Design's SOFTWARE with Future Design Controls products or products marketed by Future Design Controls only. Products are considered Future Design Controls products (and products marketed by Future Design Controls) when the sale or shipment originates from our main headquarters in Bridgeview, IL or one of our authorized office locations. Products purchased from Future Design Controls distributors or OEM's with brand labels other than Future Design controls are not considered Future Design Controls products and cannot be used with Future Design's SOFTWARE. Using Future Design's SOFTWARE with any other manufacturer (or distributor) of hardware is a violation of this license and applicable copyright laws. The SOFTWARE is considered in "use" when it is installed into permanent or temporary memory (e.g. CE display unit/PLC, or other storage device)

B. Solely with respect to electronic documents included with the SOFTWARE, you may make a copy (either in hardcopy or electronic form), provided that the software is not resold without the knowledge and acceptance of terms by Future Design Controls.

### **II. TITLE; COPYRIGHT.**

All title and copyrights in and to the SOFTWARE (including but not limited to any images, photographs, animation, video, audio, music, text and "applets" incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE are owned by Future Design Controls or its suppliers. The SOFTWARE is protected by copyright laws and international treaty provisions. Therefore, you must treat the SOFTWARE like any other copyrighted material, except that you may either (A) make one copy of the SOFTWARE solely for backup or archival purposes or (B) install the SOFTWARE on each system purchase from Future Design Controls (CE display/PLC) provided you keep the original solely for backup or archival purposes. You may not copy the printed materials accompanying the SOFTWARE.

### **III. ADDITIONAL RIGHTS AND LIMITATIONS.**

A. Reverse Engineering, De-compilation, and Disassembly: You may not reverse engineer, decompile, disassemble or modify the SOFTWARE (CE display software and/or Control Module (PLC) code).

B. No Separation of Components. The SOFTWARE is licensed as a single product and the software programs comprising the SOFTWARE may not be separated for use on any hardware not supplied by Future Design Controls.

C. Rental. You may not rent or lease the SOFTWARE.

D. Software Transfer. You may NOT transfer any of your rights under this LICENSE.

E. Termination. Without prejudice to any other rights, Future Design Controls may terminate this LICENSE if you fail to comply with the terms and conditions of this LICENSE. In such event, you must destroy all copies of the SOFTWARE and agree not to modify/distribute the software or download to any hardware not purchased from Future Design Controls.

F. The selection, application or use of Future Design products or software is the purchaser or user's responsibility. No claims will be allowed for any damages or losses, whether direct, indirect, incidental, special or consequential. In addition, Future Design reserves the right to make changes without notification to purchaser or user to materials or processing that do not affect compliance with any applicable specification. Future Design Controls makes no warranties when using Future Design Controls SOFTWARE system.



## Software Usage Note:

The selection, application or use of Future Design Control products or software is the purchaser or user's responsibility. No claims will be allowed for any damages or losses, whether direct, indirect, incidental, special or consequential.

In addition, Future Design reserves the right to make changes without notification to purchaser or user to materials or processing that do not affect compliance with any applicable specification. Future Design makes no warranties when using the Orion-M system.

## Warranty:

Future Design Controls products described in this book are warranted to be free from functional defects in material and workmanship at the time the products shipped from Future Design Controls facilities and to conform at that time to the specifications set forth in the relevant Future Design Controls manual, sheet or sheets for a period of one year after delivery to the first purchaser.

Future Design Controls FDC-2107i and 2110i products are warranted to be free from functional defects in materials and workmanship at the time the products shipped from Future Design Controls facilities and to conform at that time to the specifications set forth in the relevant Future Design Controls manual, sheet or sheets for a period of one year after delivery to the first purchaser for use.

There are no expressed or implied Warranties extending beyond the Warranties herein and above set forth. Limitations: Future Design Controls provides no warranty or representations of any sort regarding the fitness of use or application of its products by the purchaser. Users are responsible for the selection, suitability of the products for their application or use of Future Design Controls products.

Future Design Controls shall not be liable for any damages or losses, whether direct, indirect, incidental, special, consequential or any other damages, costs or expenses excepting only the cost or expense of repair or replacement of Future Design Control products as described below.

Future Design Controls sole responsibility under the warranty, at Future Design Controls option, is limited to replacement or repair, free of charge, or refund of purchase price within the warranty period specified. This warranty does not apply to damage resulting from transportation, alteration, misuse or abuse.

Future Design Controls reserves the right to make changes without notification to purchaser to materials or processing that do not affect compliance with any applicable specifications.

## Return Material Authorization:

Contact Future Design Controls for Return Material Authorization Number prior to returning any product to our facility:



7524 West 98th Place – Bridgeview, IL 60455 – Phone 888.751.5444 – Fax 888.307.8014

<http://www.futuredesigncontrols.com>