

## Reset VR18 to Factory Default Setting

- 1) Press and hold the top left key before turn on the power. Do not release it until you hear two "BI" songs.
- 2) Turn the power off and on again. It should become normal then.