

PID+ Fuzzy Logic Process Controller
C22/C62/C82/C83/C72/C42/R22

Quick Operation User Manual

**High Performance Process &
Temperature Controllers**

FDC-C22



FDC-C62



FDC-C82

FDC-C83




FDC-R22



FDC-C42

Quick Operation Manual C22/C62/C82/C83/C72/C42/R22

1. DISPLAY AND KEYS:

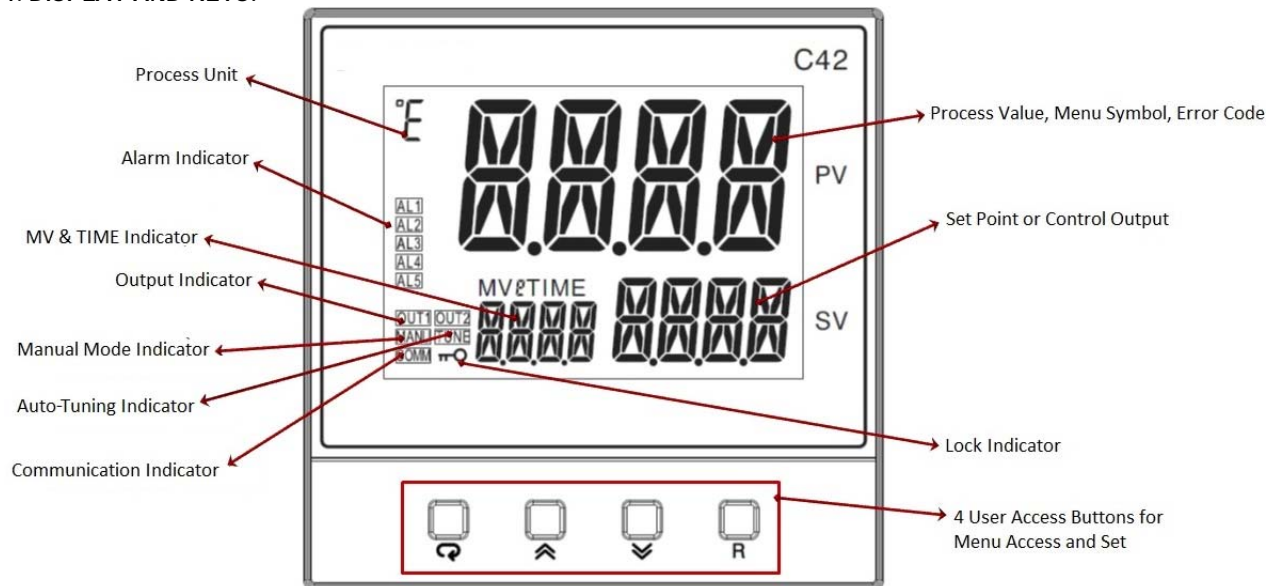

During power-up, the upper display will show PROG and the lower display will show the Firmware version for 6 seconds.

SCROLL/ENTER KEY: This key is used to select a parameter to be viewed or adjusted.

Press for the next parameter. Press and key for return to the previous parameter.


UP KEY: This key is used to increase the value of the selected parameter.

DOWN KEY: This key is used to decrease the value of the selected parameter.

RESET KEY: This key is used to:

1. Revert the display to the home screen.
2. Reset a latching alarm once the alarm condition is removed.
3. Stop manual control mode, auto-tuning mode or calibration mode.
4. Clear an auto-tuning or communication error message.
5. Restart the dwell timer when the dwell timer has timed out.
6. Enter the manual control menu if failure mode occurs.

2. MENU FLOWCHART:

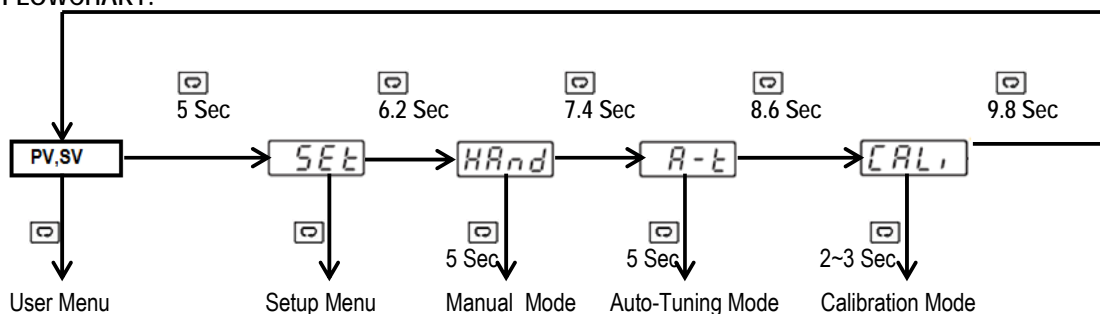


SCROLL/ENTER KEY: 1. Press and hold for 5 seconds, display will show . Press to enter the Setup Menu.

2. Press and hold for 6.2 seconds, display will show . Press and hold for 5 seconds to enter Manual Mode.


3. Press and hold for 7.4 seconds, display will show . Press and hold for 5 seconds to enter Auto-Tuning Mode.

4. Press and hold for 8.6 seconds, display will show . Press and hold for 2~3 seconds to enter Calibration Mode.


<p>2.1 User Menu: The below user menu parameters are available depends on user's selection.</p>	<p>2.2 Setup Menu: The setup menu has been categorized into eight categories as below.</p> <ol style="list-style-type: none"> 1. bASE: Basic Menu 2. oUT: Output Menu 3. ALRM: Alarm Menu 4. EI: Event Input Menu 	<p>2.2.1 Basic Menu (bASE): Use or key to get bASE in the lower display, then use key to enter basic menu parameters.</p>
--------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------

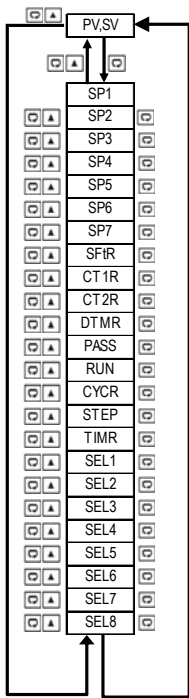


- 5. SEL: User Select Menu
- 6. CoMM: Communication Menu
- 7. Ct: Current Transformer Input Menu
- 8. PRoF: Profile Menu

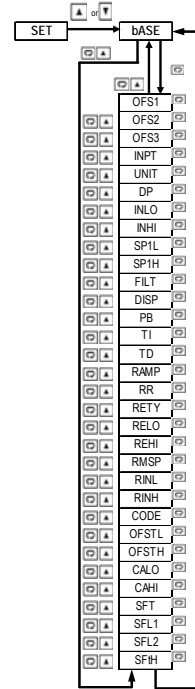


2.2.2 Output Menu (oUT): Use or key to get oUT in the lower display, then use key to enter output menu parameters.

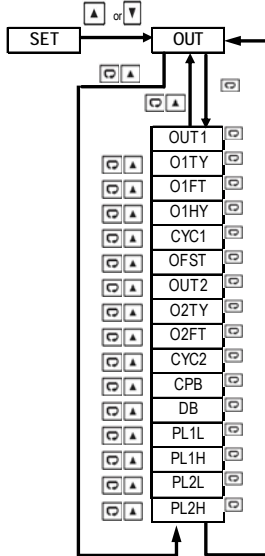


2.2.3 Alarm Menu (ALRM): Use or key to get ALRM in the lower display, then use key to enter alarm menu parameters.

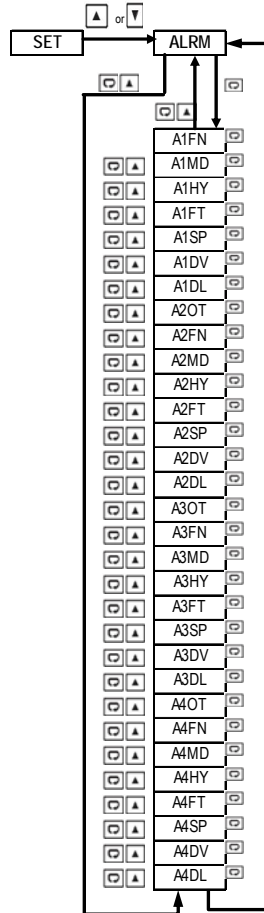


2.2.4 Event Input Menu (EI): Use or key to get EI in the lower display, then use key to enter event input menu parameters.

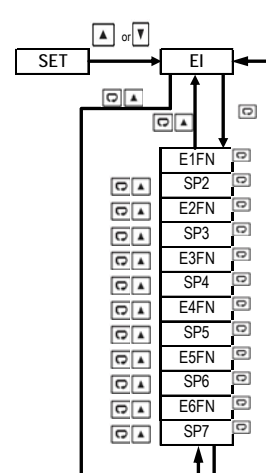


2.2.5 User Select Menu (SEL): Use \downarrow or \uparrow key to get SEL in the lower display, then use \square key to enter user select menu parameters. Up to 8 parameters by selecting SEL1~SEL8 can be put in the User Menu.

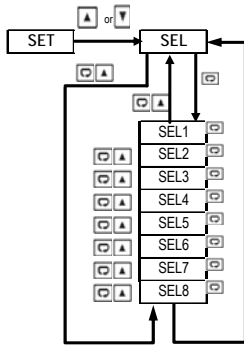


2.2.6 Communication Menu (CoMM): Use \downarrow or \uparrow key to get CoMM in the lower display, then use \square key to enter communication menu parameters.

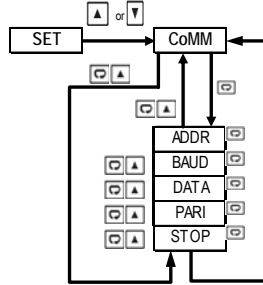


2.2.7 Current Transformer Input Menu (Ct): Use \downarrow or \uparrow key to get Ct in the lower display, then use \square key to enter current transformer input menu parameters.

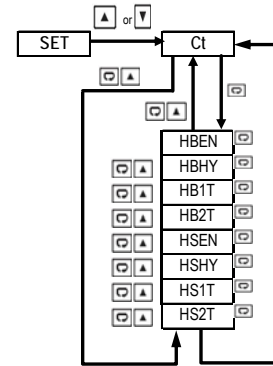

2.2.8 Profile Menu (PRoF): Use \downarrow or \uparrow key to get PRoF in the lower display, then use \square key to enter profile menu parameters.

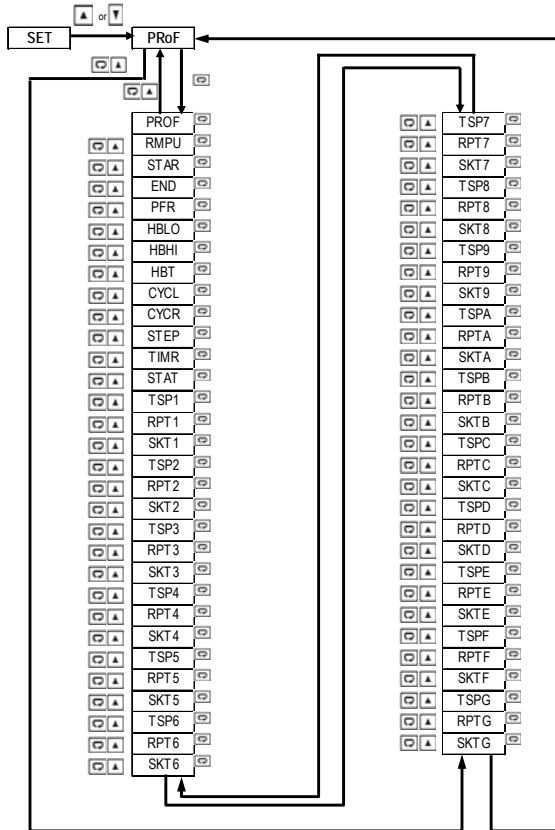


2.3 Manual Mode Menu: Press and hold \square key for 5 seconds until MANU indicator flashes to enter manual mode menu.

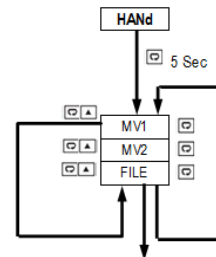

2.4 Auto-Tuning Mode: Press and hold \square key for 5 seconds until TUNE indicator flashes to activate auto-tuning mode.

A-t

2.5 Calibration Mode: Press and hold \square key for 2~3 seconds, release it to enter calibration mode. Then press \square Key for 5 seconds to perform calibration.

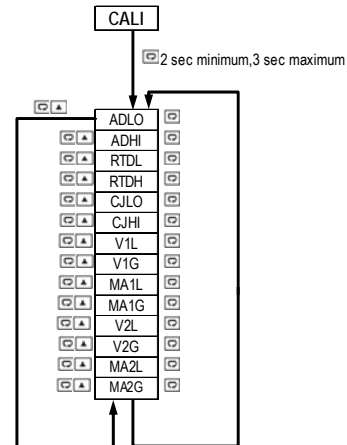

Note: Using Manual, Auto-Tuning, Calibration modes will break the control loop and change some of the previous setting data. Make sure that the system is allowable to apply these modes.

3. PARAMETERS DESCRIPTION:

Modbus Register Address	Parameter Notation	Parameter Description	Range
0	SP1	Set Point 1	Low: SP1L High: SP1H
1	SP2	Set Point 2	Low: SP1L High: SP1H
2	SP3	Set Point 3	Low: SP1L High: SP1H
3	SP4	Set Point 4	Low: SP1L High: SP1H
4	SP5	Set Point 5	Low: SP1L High: SP1H
5	SP6	Set Point 6	Low: SP1L High: SP1H
6	SP7	Set Point 7	Low: SP1L High: SP1H
7	DTMR	Dwell timer output time (Minute: Seconds)	Low: 0.0 High: 4553.5
8	INPT	Input sensor selection	<i>J_tC</i> : J type Thermocouple <i>K_tC</i> : K type Thermocouple <i>T_tC</i> : T type Thermocouple <i>E_tC</i> : E type Thermocouple <i>B_tC</i> : B type Thermocouple <i>R_tC</i> : R type Thermocouple <i>S_tC</i> : S type Thermocouple <i>N_tC</i> : N type Thermocouple <i>L_tC</i> : L type Thermocouple <i>U_tC</i> : U type Thermocouple <i>P_tC</i> : P type Thermocouple <i>C_tC</i> : C type Thermocouple <i>D_tC</i> : D type Thermocouple <i>Pt.dN</i> : PT100 Ω DIN curve <i>Pt.JS</i> : PT100 Ω JIS curve <i>4-20</i> : 4-20mA linear current input <i>0-20</i> : 0-20mA linear current input <i>0-5V</i> : 0-5VDC linear voltage input <i>1-5V</i> : 1-5VDC linear voltage input <i>0-10</i> : 0-10VDC linear voltage input
9	UNIT	Input unit selection	<i>oC</i> : °C unit <i>oF</i> : °F unit <i>Pu</i> : Process unit
10	DP	Decimal point selection	<i>No.dP</i> : No decimal point <i>1-dP</i> : 1 decimal digit <i>2-dP</i> : 2 decimal digit <i>3-dP</i> : 3 decimal digit
11	INLO	Input low scale value	Low: -19999 High:45536
12	INHI	Input high scale value	Low:INLO+50 High:45536
13	SP1L	Low limit of set point value	Low: -19999 High :45536
14	SP1H	High limit of set point value	Low: SP1L High:45536
15	FILT	Filter damping time constant of PV	<i>0</i> : 0 second time constant <i>0.2</i> : 0.2 second time constant <i>0.5</i> : 0.5 second time constant <i>1</i> : 1 second time constant <i>2</i> : 2 second time constant <i>5</i> : 5 second time constant <i>10</i> : 10 second time constant <i>20</i> : 20 second time constant <i>30</i> : 30 second time constant <i>60</i> : 60 second time constant
16	DISP	MV/TIME display selection	<i>None</i> : No Display <i>MV1</i> : Display MV1 (66/130) <i>MV2</i> : Display MV2(67/131) <i>tIMR</i> : Display Time (68) <i>PRoF</i> : Display STAT(162) if have profile function
17	PB	Proportional band value	Low: 0.0 High: 500.0°C (900.0°F)
18	TI	Integral time value	Low: 0 High: 3600 sec
19	TD	Derivative time value	Low: 0.0 High: 360.0 sec

Modbus Register Address	Parameter Notation	Parameter Description	Range
20	OUT1	Output 1 function	<i>REVR</i> : Reverse (heating) control action <i>dIRt</i> : Direct (cooling) control action
21	O1TY	Output 1 signal type	<i>RELY</i> : Relay output <i>SSrd</i> : Solid state relay drive output <i>4-20</i> : 4-20mA linear current <i>0-20</i> : 0-20mA linear current <i>0-5V</i> : 0-5VDC linear voltage <i>1-5V</i> : 1-5VDC linear voltage <i>0-10</i> : 0-10VDC linear voltage
22	O1FT	Output 1 failure transfer mode	Select BPLS (Bumpless transfer), or 0.0 ~ 100.0 % to continue output 1 control function if the sensor fails, or select OFF (0) or ON (1) for ON-OFF control
23	O1HY	Output 1 ON-OFF control hysteresis	Low: 0.1°C(0.2°F) High: 50.0°C(90.0°F)
24	CYC1	Output 1 cycle time	Low: 0.1 High: 90.0 sec.
25	OFST	Offset value for P control	Low: 0 High: 100.0 %
26	RAMP	Ramp function selection	<i>NoNE</i> : No Ramp Function <i>MINR</i> : Use unit/minute as Ramp Rate <i>HRR</i> : Use unit/hour as Ramp Rate
27	RR	Ramp rate	Low: 0.0 High: 500.0°C(900.0°F)
28	OUT2	Output 2 function	<i>NoNE</i> : Output 2 turned off <i>COOL</i> : Cooling PID Function <i>AL1</i> : Alarm 1 Function <i>rAL1</i> : Reverse Alarm 1 Function
29	O2TY	Output 2 signal type	<i>RELY</i> : Relay output <i>SSrd</i> : Solid state relay drive output <i>4-20</i> : 4-20mA linear current <i>0-20</i> : 0-20mA linear current <i>0-5V</i> : 0-5VDC linear voltage <i>1-5V</i> : 1-5VDC linear voltage <i>0-10</i> : 0-10VDC linear voltage
30	O2FT	Output 2 failure transfer mode	Select BPLS (Bumpless transfer), or 0.0 ~ 100.0 % to continue output 2 control function if the sensor fails
31	CYC2	Output 2 cycle time	Low: 0.1 High: 90.0 sec.
32	CPB	Cooling proportional band value	Low: 50 High: 300 %
33	DB	Heating-cooling dead band (negative value= overlap)	Low: - 36.0 High: 36.0 %
34	A1FN	Alarm 1 function for alarm 1 output	<i>NoNE</i> : No alarm function <i>dtMR</i> : Dwell timer action <i>dE.Ht</i> : Deviation high alarm <i>dE.Lo</i> : Deviation low alarm <i>db.Ht</i> : Deviation band out of band alarm <i>db.Lo</i> : Deviation band in band alarm <i>PV.Ht</i> : Process value high alarm <i>PV.Lo</i> : Process value low alarm <i>H.bK</i> : Heater break alarm <i>H.St</i> : Heater short alarm
35	A1MD	Alarm 1 operation mode	<i>NoRM</i> : Normal alarm action <i>LtCH</i> : Latching alarm action <i>HoLd</i> : Hold alarm action <i>Lt.Ho</i> : Latching & Hold action <i>SP.Ho</i> : Set point holding alarm
36	A1HY	Hysteresis control of alarm 1	Low: 0.1°C High: 50.0°C(90.0°F)
37	A1FT	Alarm 1 failure transfer mode	<i>OFF</i> : Alarm output OFF if sensor fails <i>ON</i> : Alarm output ON if sensor fails
38	A1SP	Alarm 1 set point	Low: -19999 High: 45536
39	A1DV	Alarm 1 deviation value	Low: -19999 High: 45536
40	A2OT	Alarm 2 Output	<i>ALM</i> : Alarm 2 output 1 <i>RALM</i> : Reverse Alarm 2 Output

Modbus Register Address	Parameter Notation	Parameter Description	Range
41	A2FN	Alarm 2 function for alarm 2 output	<i>NoNE</i> : No alarm function <i>dtMR</i> : Dwell timer action <i>dE.HI</i> : Deviation high alarm <i>dE.Lo</i> : Deviation low alarm <i>db.HI</i> : Deviation band out of band alarm <i>db.Lo</i> : Deviation band in band alarm <i>PV.HI</i> : Process value high alarm <i>PV.Lo</i> : Process value low alarm <i>H.bK</i> : Heater break alarm <i>H.St</i> : Heater short alarm <i>E1.C.o</i> : Event Input 1 Control Alarm Output <i>E2.C.o</i> : Event Input 2 Control Alarm Output
42	A2MD	Alarm 2 operation mode	<i>NoRM</i> : Normal alarm action <i>LtCH</i> : Latching alarm action <i>HoLd</i> : Hold alarm action <i>Lt.Ho</i> : Latching & Hold action <i>SP.Ho</i> : Set point holding alarm
43	A2HY	Hysteresis control of alarm 2	Low: 0.1°C High: 50.0°C(90.0°F)
44	A2FT	Alarm 2 failure transfer mode	<i>OFF</i> : Alarm output OFF if sensor fails <i>ON</i> : Alarm output ON if sensor fails
45	A2SP	Alarm 2 set point	Low: -19999 High: 45536
46	A2DV	Alarm 2 deviation value	Low: -19999 High: 45536
47	A3OT	Alarm 3 output	<i>ALM</i> : Alarm 3 output <i>RALM</i> : Reverse Alarm3 Output
48	A3FN	Alarm 3 function for alarm 3 output	<i>NoNE</i> : No alarm function <i>dtMR</i> : Dwell timer action <i>dE.HI</i> : Deviation high alarm <i>dE.Lo</i> : Deviation low alarm <i>db.HI</i> : Deviation band out of band alarm <i>db.Lo</i> : Deviation band in band alarm <i>PV.HI</i> : Process value high alarm <i>PV.Lo</i> : Process value low alarm <i>H.bK</i> : Heater break alarm <i>H.St</i> : Heater short alarm <i>E1.C.o</i> : Event Input 1 Control Alarm Output <i>E2.C.o</i> : Event Input 2 Control Alarm Output
49	A3MD	Alarm 3 operation mode	<i>NoRM</i> : Normal alarm action <i>LtCH</i> : Latching alarm action <i>HoLd</i> : Hold alarm action <i>Lt.Ho</i> : Latching & Hold action <i>SP.Ho</i> : Set point holding alarm
50	A3HY	Hysteresis control of alarm 3	Low: 0.1°C High: 50.0°C(90.0°F)
51	A3FT	Alarm 3 failure transfer mode	<i>OFF</i> : Alarm output OFF if sensor fails <i>ON</i> : Alarm output ON if sensor fails
52	A3SP	Alarm 3 set point	Low: -19999 High: 45536
53	A3DV	Alarm 3 deviation value	Low: -19999 High: 45536
54	A4OT	Alarm 4 output	<i>ALM</i> : Alarm 4 output <i>RALM</i> : Reverse Alarm 4 Output
55	A4FN	Alarm 4 function for alarm output	<i>NoNE</i> : No alarm function <i>dtMR</i> : Dwell timer action <i>dE.HI</i> : Deviation high alarm <i>dE.Lo</i> : Deviation low alarm <i>db.HI</i> : Deviation band out of band alarm <i>db.Lo</i> : Deviation band in band alarm <i>PV.HI</i> : Process value high alarm <i>PV.Lo</i> : Process value low alarm <i>H.bK</i> : Heater break alarm <i>H.St</i> : Heater short alarm

Modbus Register Address	Parameter Notation	Parameter Description	Range
56	A4MD	Alarm 4 operation mode	<i>NoRM</i> : Normal alarm action <i>LiCH</i> : Latching alarm action <i>HoLd</i> : Hold alarm action <i>Lt.Ho</i> : Latching & Hold action <i>SP.Ho</i> : Set point holding alarm
57	A4HY	Hysteresis control of alarm 4	Low: 0.1°C High: 50.0°C(90.0°F)
58	A4FT	Alarm 4 failure transfer mode	<i>OFF</i> : Alarm output OFF if sensor fails <i>ON</i> : Alarm output ON if sensor fails
59	A4SP	Alarm 4 set point	Low: -19999 High: 45536
60	A4DV	Alarm 4 deviation value	Low: -19999 High: 45536
61	BPL1	Bumpless transfer value of MV1	Low: 0.00 High: 100.00
62	BPL2	Bumpless transfer value of MV2	Low: 0.00 High: 100.00
63	CJCL	Sense voltage during cold junction calibration low	Low: 0 High: 7552
64	PV64	Process value	Low: -19999 High:45536
65	SV65	Current set point value	Low: SP1L High:SP1H
66	MV1 66	Output 1 %Value(Heating)	Low: 0.00 High: 100.00 %
67	MV2 67	Output 2 %Value(Cooling)	Low: 0.00 High: 100.00 %
68	TIMER	Remaining time of dwell timer	Low: 0.0 High: 4553.6
69	EROR	Error code	Low: 0 High: 65535
70	MODE	Operation mode & alarm status	Low: 0 High: 65535
71	PROG71	Program code	C22:22.XX C62:62.XX C82:82.XX C83:83.XX C72:72.XX C42:42.XX R22:23.XX
72	CMND	Command code	Low: 0 High: 65535
73	JOB1	Job code	Low: 0 High: 65535
74	JOB2	Job code	Low: 0 High: 65535
75	JOB3	Job code	Low: 0 High: 65535
76	CJCT	Cold Junction Temperature	Low: -4000 High: 9000
77	ADLO	mV calibration low coefficient	Low: -1999 High: 1999
78	ADHI	mV calibration high coefficient	Low: -1999 High: 1999
79	RTDL	RTD calibration low coefficient	Low: -1999 High: 1999
80	RTDH	RTD calibration high coefficient	Low: -1999 High: 1999
81	CJLO	Cold junction calibration low coefficient	Low: -5.00 High: 40.00
82	CJHI	Cold junction calibration high coefficient	Low: -1999 High: 1999
83	V1L	V1 calibration low coefficient	Low: -1999 High: 1999
84	V1G	V1 calibration high coefficient	Low: -1999 High: 1999
85	MA1L	MA1 calibration low coefficient	Low: -1999 High: 1999
86	MA1G	MA1 calibration high coefficient	Low: -1999 High: 1999
87	V2L	V2 calibration low coefficient	Low: -1999 High: 1999
88	V2G	V2 calibration high coefficient	Low: -1999 High: 1999
89	MA2L	MA2 calibration low coefficient	Low: -1999 High: 1999
90	MA2G	MA2 calibration high coefficient	Low: -1999 High: 1999
91	PL1L	Power limit 1 low	Low: 0 High:PL1H or 50%
92	PL1H	Power limit 1 high	Low: PL1L High: 100 %
93	PL2L	Power limit 2 low	Low: 0 High: PL2H or 50%
94	PL2H	Power limit 2 high	Low: PL2L High: 100 %


Modbus Register Address	Parameter Notation	Parameter Description	Range
95~102	SEL1~8	Select 1st~8th parameter for user menu	<p><i>NoNE</i>: No Parameter selected <i>dtMR</i>: DTMR is moved to USER Menu <i>dISP</i>: DISP is moved to USER Menu <i>Pb</i>: PB is moved to USER Menu <i>ti</i>: TI is moved to USER Menu <i>td</i>: TD is moved to USER Menu <i>o1HY</i>: O1HY is moved to USER Menu <i>RR</i>: RR is moved to USER Menu <i>CPb</i>: CPB is moved to USER Menu <i>db</i>: DB is moved to USER Menu <i>A1HY</i>: A1HY is moved to USER Menu <i>A1SP</i>: A1SP is moved to USER Menu <i>A1dV</i>: A1DV is moved to USER Menu <i>A2HY</i>: A2HY is moved to USER Menu <i>A2SP</i>: A2SP is moved to USER Menu <i>A2dV</i>: A2DV is moved to USER Menu <i>A3HY</i>: A3HY is moved to USER Menu <i>A3SP</i>: A3SP is moved to USER Menu <i>A3dV</i>: A3DV is moved to USER Menu <i>A4HY</i>: A4HY is moved to USER Menu <i>A4SP</i>: A4SP is moved to USER Menu <i>A4dV</i>: A4DV is moved to USER Menu <i>PL1L</i>: PL1L is moved to USER Menu <i>PL1H</i>: PL1H is moved to USER Menu <i>PL2L</i>: PL2L is moved to USER Menu <i>PL2H</i>: PL2H is moved to USER Menu <i>OFTL</i>: OFTL is moved to USER Menu <i>OFTH</i>: OFTH is moved to USER Menu <i>CALO</i>: CALO is moved to USER Menu <i>CAHI</i>: CAHI is moved to USER Menu <i>A1DL</i>: A1DL is moved to USER Menu <i>A2DL</i>: A2DL is moved to USER Menu <i>A3DL</i>: A3DL is moved to USER Menu <i>A4DL</i>: A4DL is moved to USER Menu</p>
103	OFS1	Option function 1 selection	<p>C82/C83/C72/C42: <i>NoNE</i>: Not selected <i>R485</i>: RS-485 and Remote SP</p> <p>C62: <i>NoNE</i>: Not selected <i>R485</i>: RS-485</p> <p>C22/R22: <i>NoNE</i>: Not selected <i>R485</i>: RS-485 <i>E11</i>: Event 1 input <i>CT1</i>: CT 1 input <i>4-20</i>: 4-20mA retransmission output <i>0-20</i>: 0-20mA retransmission output <i>0-5V</i>: 0-5VDC retransmission output <i>1-5V</i>: 1-5VDC retransmission output <i>0-10</i>: 0-10VDC retransmission output</p>

104	OFS2	Option function 2 selection	C82/C83/C72/C42: <i>NoNE</i> : Not selected <i>CT1</i> : CT1 input and Remote SP <i>CT1.2</i> : CT1,CT2 inputs and Remote SP
			C62: <i>NoNE</i> : Not selected <i>EI1.2</i> : Event input 1 and Event input 2 <i>EI.CT</i> : Event input 1 and CT2 input <i>CT1.2</i> : CT1 and CT2 inputs
			C22: <i>NoNE</i> : No selected <i>4-20</i> : 4-20mA retransmission output <i>0-20</i> : 0-20mA retransmission output <i>0-5V</i> : 0-5V retransmission output <i>1-5V</i> : 1-5V retransmission output <i>0-10</i> : 0-10 retransmission output <i>AL2</i> : Alarm 2 output
105	OFS3	Option function 3 selection	R22: <i>NoNE</i> : No selected <i>4-20</i> : 4-20mA retransmission output <i>0-20</i> : 0-20mA retransmission output <i>0-5V</i> : 0-5V retransmission output <i>1-5V</i> : 1-5V retransmission output <i>0-10</i> : 0-10 retransmission output <i>AL2</i> : Alarm 2 output <i>EI2</i> : Event2 Input <i>CT2</i> : CT2 Input
			C82/C83/C42: <i>NoNE</i> : Not selected <i>4-20</i> : 4-20mA retransmission output & Remote SP <i>0-20</i> : 0-20mA retransmission output & Remote SP <i>0-5V</i> : 0-5VDC retransmission output & Remote SP <i>1-5V</i> : 1-5VDC retransmission output & Remote SP <i>0-10</i> : 0-10VDC retransmission output & Remote SP <i>A.4.20</i> : Alarm 4, 4-20mA retransmission output & Remote SP <i>A.0.20</i> : Alarm 4, 0-20mA retransmission output & Remote SP <i>A.0.5V</i> : Alarm 4, 0-5V retransmission output & Remote SP <i>A.1.5V</i> : Alarm 4, 1-5V retransmission output & Remote SP <i>A.0.10</i> : Alarm 4, 0-10V retransmission output & Remote SP
			C72: <i>NoNE</i> : Not selected <i>4-20</i> : 4-20mA retransmission output & Remote SP <i>0-20</i> : 0-20mA retransmission output & Remote SP <i>0-5V</i> : 0-5VDC retransmission output & Remote SP <i>1-5V</i> : 1-5VDC retransmission output & Remote SP <i>0-10V</i> : 0-10VDC retransmission output & Remote SP <i>AL4</i> : Alarm 4 Output
106	RETY	Retransmission type	C62: <i>NoNE</i> : Not selected <i>4-20</i> : 4-20mA retransmission output <i>0-20</i> : 0-20mA retransmission output <i>0-5V</i> : 0-5VDC retransmission output <i>1-5V</i> : 1-5VDC retransmission output <i>0-10</i> : 0-10VDC retransmission output <i>AL3</i> : Alarm 3 output
			<i>RE.PV</i> : Retransmit process value <i>RE.SP</i> : Retransmit set point value
			Low: -19999 High: 45536
107	RELO	Retransmission low scale value	Low: -19999 High: 45536
108	REHI	Retransmission high scale value	Low: -19999 High: 45536
109	ADDR	Address assignment of digital communication	Low: 1 High: 255


110	BAUD	Baud rate of digital communication	2K4: 2.4 Kbits/s baud rate 4K8: 4.8 Kbits/s baud rate 9K6: 9.6 Kbits/s baud rate 14K4: 14.4 Kbits/s baud rate 19K2: 19.2 Kbits/s baud rate 28K8: 28.8 Kbits/s baud rate 38K4: 38.4 Kbits/s baud rate 57K6: 57.6 Kbits/s baud rate 115K: 115.2 Kbits/s baud rate
111	DATA	Data bit count of digital communication	7bIt: 7 data bits 8bIt: 8 data bits
112	PARI	Parity bit of digital communication	EVEN: Even parity Odd: Odd parity NoNE: No parity bit
113	STOP	Stop bit count of digital communication	1bIt: One stop bit 2bIt: Two stop bits
114	CT1R	Reading of CT 1	Low: 0.0 High: 150.0
115	CT2R	Reading of CT 2	Low: 0.0 High: 150.0
116	HBEN	Enable Heater break detection	oFF: Off 1 oN: On
117	HBHY	Heater break hysteresis	Low: 0.1 High: 50.0
118	HB1T	Triple point current for heater break 1	Low: 0.0 High: 120.0
119	HB2T	Triple point current for heater break 2	Low: 0.0 High: 120.0
120	HSEN	Enable Heater short detection	oFF: Off 1 oN: On
121	HSHY	Heater short hysteresis	Low: 0.1 High: 50.0
122	HS1T	Triple point current for heater short 1	Low: 0.0 High: 120.0
123	HS2T	Triple point current for heater short 2	Low: 0.0 High: 120.0
124	RMSP	Remote SP type	None: No Remote SP 4-20: 4-20mA retransmission output 0-20: 0-20mA retransmission output 0-5V: 0-5VDC retransmission output 1-5V: 1-5VDC retransmission output 0-10: 0-10VDC retransmission output
125	RINL	Remote SP Input low scale value	Low: -19999 High: RINH-50
126	RINH	Remote SP Input high scale value	Low: RINL+50 High: 45536
127	FILE	Default File Selection	dFLt: Default Menu Ld.Us: Load User Setting St.Us: Store User Setting
128	PV	Process value	Low: -19999 High: 45536
129	SV	Current set point value	Low: SP1L High: SP1H
130	MV1	Output 1 percentage value (Heating)	Low: 0.00 High: 100.00
131	MV2	Output 2 percentage value (Cooling)	Low: 0.00 High: 100.00
132	PASS	Password entry	Low: 0 High: 9999
133	CODE	Security code for parameter protection	Low: 0 High: 9999 0 = unprotected 1000 = user mode unprotected 9999=SPx (1 to 7) unprotected
134	OFTL	Offset value for low point calibration	Low: -1999 High: 1999
135	OFTH	Offset value for high point calibration	Low: -1999 High: 1999
136	CALO	Input signal value during low point calibration	Low: -19999 High: CAHI-1
137	CAHI	Input signal value during high point calibration	Low: CALO+1 High: 45536
138-139	...	Reserved	...
140	PROG	Program code	Same as PROG71

141	E1FN	Event input 1 function	<i>NoNE</i> : none <i>SP2</i> : SP2 activated to replace SP1 <i>rS.A1</i> : Reset alarm 1 output <i>rS.A2</i> : Reset alarm 2 output <i>rS.A3</i> : Reset alarm 3 output <i>rS.A4</i> : Reset alarm 4 output <i>rS.Ao</i> : Reset all alarm outputs <i>CA.LH</i> : Cancel alarm latch <i>d.o1</i> : Disable output 1 <i>d.o2</i> : Disable output 2 <i>d.o12</i> : Disable output 1 and 2 <i>LoCK</i> : Lock all parameters and Read only communication <i>AU.MA</i> : Switch Auto and Manual control mode <i>F.tr</i> : Failure Transfer <i>AL.oN</i> : EI Control Alarm Output
142	E2FN	Event input 2 function	<i>SP3</i> : SP3 activated to replace SP1 <i>Others</i> : Same as E1FN
143	E3FN	Event input 3 function	<i>NoNE</i> : none <i>SP4</i> : SP4 activated to replace SP1 <i>rS.A1</i> : Reset alarm 1 output <i>rS.A2</i> : Reset alarm 2 output <i>rS.A3</i> : Reset alarm 3 output <i>rS.A4</i> : Reset alarm 4 output <i>rS.Ao</i> : Reset all alarm outputs <i>CA.LH</i> : Cancel alarm latch <i>d.o1</i> : Disable output 1 <i>d.o2</i> : Disable output 2 <i>d.o12</i> : Disable output 1 and 2 <i>LoCK</i> : Lock all parameters and Read only communication <i>AU.MA</i> : Switch Auto and Manual control mode <i>F.tr</i> : Failure Transfer <i>StAR</i> : Run profile as RUN=STAR <i>CoNt</i> : Run Profile as RUN=CONT <i>PV</i> : Run Profile as RUN=PV <i>HoLd</i> : Run Profile as RUN=HOLD <i>StoP</i> : Run Profile as RUN=STOP
144	E4FN	Event input 4 function	<i>SP5</i> : SP5 activated to replace SP1 <i>Others</i> : Same as E3FN
145	E5FN	Event input 5 function	<i>NoNE</i> : none <i>SP4</i> : SP4 activated to replace SP1 <i>rS.A1</i> : Reset alarm 1 output <i>rS.A2</i> : Reset alarm 2 output <i>rS.A3</i> : Reset alarm 3 output <i>rS.A4</i> : Reset alarm 4 output <i>rS.Ao</i> : Reset all alarm outputs <i>CA.LH</i> : Cancel alarm latch <i>d.o1</i> : Disable output 1 <i>d.o2</i> : Disable output 2 <i>d.o12</i> : Disable output 1 and 2 <i>LoCK</i> : Lock all parameters and Read only communication <i>AU.MA</i> : Switch Auto and Manual control mode <i>F.tr</i> : Failure Transfer
146	E6FN	Event input 6 function	<i>SP7</i> : SP7 activated to replace SP1 <i>Others</i> : Same as E5FN
147	A1DL	Alarm 1 Delay (Minutes: Seconds)	Low: 00.00(OFF) High:99.59
148	A2DL	Alarm 2 Delay (Minutes: Seconds)	Low: 00.00(OFF) High:99.59
149	A3DL	Alarm 3 Delay (Minutes: Seconds)	Low: 00.00(OFF) High:99.59
150	A4DL	Alarm 4 Delay (Minutes: Seconds)	Low: 00.00(OFF) High:99.59
151	SFT	Soft Start Time (Hours: Minutes)	Low: 00.00(OFF) High:99.59
152	SPL1	Soft Start Power Limit for Output 1	Low: PL1L High:PL1H
153	SPL2	Soft Start Power Limit for Output 2	Low: PL2L High:PL2H
154	SFTH	Soft Start Threshold	Low: -19999 High:45536
155	SFTR	Soft Start Timer (Hours: Minutes)	Low: 00.00 High:99.59


4. WIRING DIAGRAM:

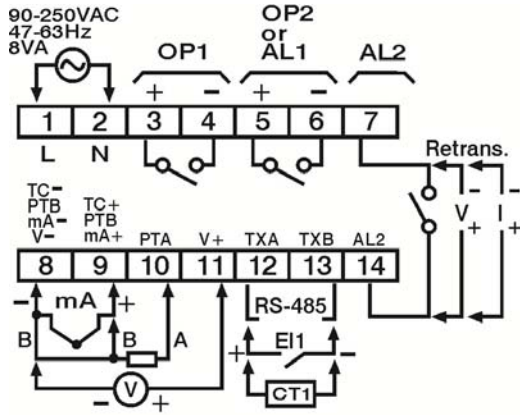


C22 Terminal Connection

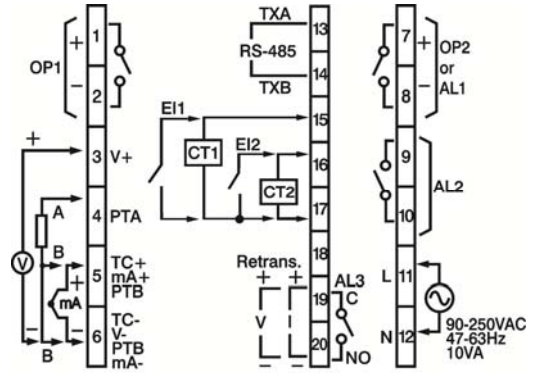


C62 Terminal Connection

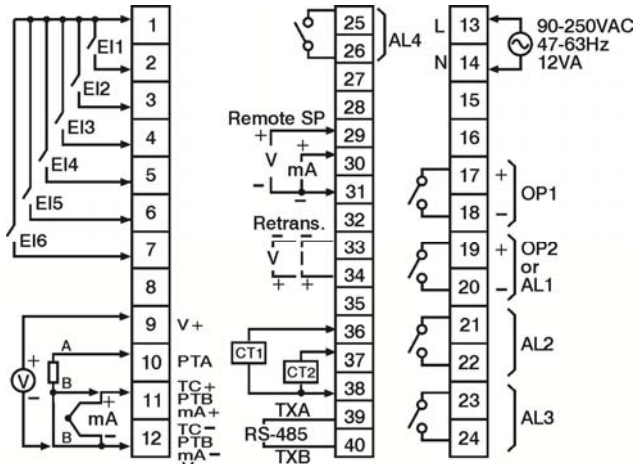


C82/C42 Terminal Connection

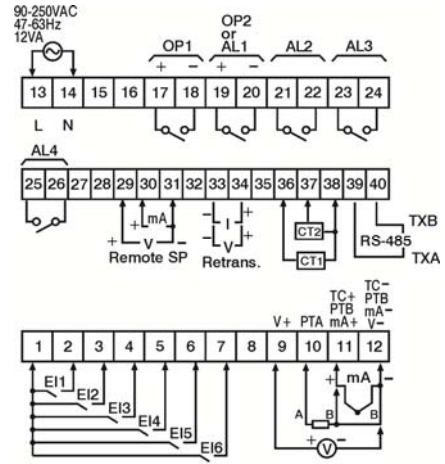

C83 Terminal Connection

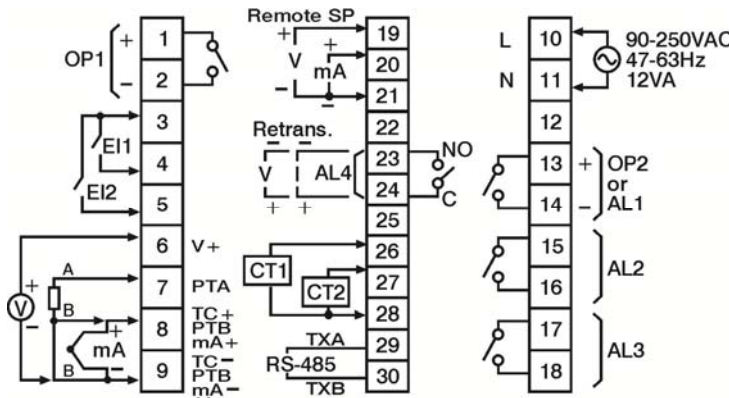

C72 Terminal Connection

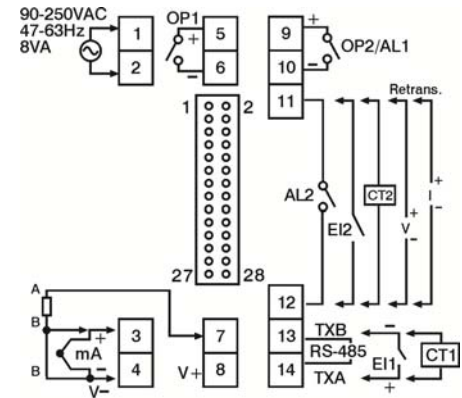

R22 Terminal Connection

5. PROGRAMMING:

5.1 User Security: There are two parameters PASS (password) and CODE (security code) to control the data security function.

CODE Value	PASS Value	Access Rights
0	Any Value	All parameters are changeable
1000	=1000	All parameters are changeable
	≠1000	Only user menu parameters changeable
9999	=9999	All parameters are changeable
	≠9999	Only SP1 to SP7 are changeable
Others	=CODE	All parameters are changeable
	≠CODE	No parameters can be changed

5.2 Signal Input:

INPT: Select the sensor type or signal type for signal input.

Range: (Thermocouple) J_TC, K_TC, T_TC, E_TC, B_TC, R_TC, S_TC, N_TC, L_TC,
(RTD) PT.DN, PT.JS or (Linear) 4-20, 0-20, 0-60, 0-1V, 0-5V, 1-5V, 0-10

UNIT: Select the process unit.

Range: °C, °F, PU (Process unit). If the unit is neither °C nor °F, then select PU.

DP: Select the resolution of process value.

Range: For Thermocouple and RTD Signal NO.DP, 1-DP and for Linear Signal NO.DP, 1- DP, 2-DP, 3-DP.

INLO: Select the low scale value for the linear type input.

INHI: Select the high scale value for the linear type input.

5.3 Control Output: There are 4 kinds of control modes can be configured as shown below.

Control Mode	OUT 1	OUT 2	O1HY	O2HY	CPB	DB
Heat Only	REVR	X	Δ	X	X	X
Cool Only	DIRT	X	Δ	X	X	X
Heat PID Cool ON-OFF	REVR	DE.HI	X	O	X	X
Heat PID Cool PID	REVR	COOL	X	X	O	O

X: Not applicable O: Adjust to meet process Requirements Δ: Required if ON-OFF Control is configured

5.4 Alarm: The controller has up to four alarm outputs depending on the controller model. There are 11 types of alarm functions and one dwell timer that can be selected. There are 4 kinds of alarm modes (A1MD, A2MD, A3MD, and A4MD) available for each alarm function (A1FN, A2FN, A3FN, and A4FN). In addition to the alarm output, output 2 can also be configured as an alarm. But output 2 has only provides 8 different alarm functions or dwell timer available.

5.5 Alarm Modes: There are four types of alarm modes available for each alarm function.

Normal Alarm (ALMD = NORM): When a normal alarm is selected, the alarm output is de-energized in the non-alarm condition and energized in an alarm condition.

Latching Alarm (ALMD = LTCH): If a latching alarm is selected, once the alarm output is energized, it will remain unchanged even if the alarm condition is cleared. The latching alarm can be reset by pressing the RESET key once the alarm condition is removed.

Holding Alarm (ALMD = HOLD): A holding alarm prevents an alarm condition during power up. This will ignore the alarm condition at first time after power on. Afterwards, the alarm performs the same function as normal alarm.

Latching / Holding Alarm (ALMD = LT.HO): A latching / holding alarm performs both holding and latching functions. The latching alarm is reset when the RESET key is pressed after the alarm condition is removed.

Set Point Holding Alarm (ALMD = SP.HO): A set point holding alarm prevents an alarm from power up and / or changing set point. The alarm output is de-energized whenever the set point is changed even if it is in an alarm condition. The alarm reverts to a normal alarm once the alarm condition is removed.







5.6 Alarm Delay: In certain applications during startup, nuisance alarms will be generated before the process value reaches the set point. To avoid these kinds of nuisance alarms, a time delay for alarms is available. To enable the time delay for alarms, set the delay time using the A1DL, A2DL, A3DL, and A4DL parameters. These parameters will avoid the nuisance alarm during the process value reaches set point.

5.7 Ramp: The ramping function is performed during power up as well as any time the set point is changed. Choose MINR or HRR for the RAMP setting, and the controller will perform the ramping function. The ramp rate is programmed by adjusting the RR setting. The ramping function is disabled as soon as the Failure mode, the Manual control mode, the Auto-tuning mode or the Calibration mode occur.


5.8 Dwell Timer: The Dwell timer can be with or without a Ramp. Alarm outputs can be configured as dwell timers by selecting dtMR for A1FN. If A1FN is set to dtMR, Alarm 1 will act as a dwell timer. Similarly, Alarm 2, Alarm 3 and Alarm 4 will act as dwell timers if A2FN, A3FN, or A4FN is set to dtMR. When the dwell timer is configured, the parameter DTMR is used for dwell time adjustment. The dwell time is measured in minutes ranging from 0.0 to 4553.6 minutes. The Timer starts to count as soon as the Process Value (PV) reaches its set point (SV), and triggers an alarm output once the time has elapsed.

5.9 User Calibration: User calibration allows the user to offset the permanent factory calibration. There are two parameters: Offset Low (OFTL) and Offset High (OFTH) for adjustment to correct an error in the process value.

There are two parameters for the sensor input. These two signal values are CALO and CAHI. The input signal low and high values are to be entered in the CALO and CAHI parameters respectively.

Press and hold the  key until the setup Menu page is obtained. Then, press and release the  key to navigate to the calibration low parameter OFTL. Send your low signal to the sensor input of the controller, then press and release the  key. If the process value (the upper display) is different from the input signal, the user can use  and  keys to change the OFTL value (the lower display) until the process value is equal to the value the user needs. Press and hold the  key for 5 seconds to complete the low point calibration. A similar procedure is applied for high scale calibration.

As shown below, the two points OFTL and OFTH construct a straight line. For the purpose of accuracy, it is best to calibrate with the two points as far apart as possible. After the user calibration is complete, the input type will be stored in the memory. If the input type is changed, a calibration error will occur and an error code *CAEr* is displayed.

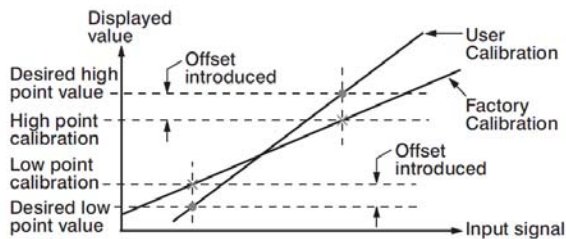

5.10 Digital Filter: In certain applications the process value is too unstable to be read. To improve this, a programmable low pass filter incorporated in the controller can be used. This is a first order filter with a time constant specified by the FILT parameter. A value of 0.5 seconds is used as a factory default. Adjust FILT to change the time constant from 0 to 60 seconds. 0 seconds represents no filter applied to the input signal.

5.11 Failure Transfer: The controller will enter failure mode if one of the following conditions occurs.

1. SBER error occurs due to an input sensor break, input current below 1mA for 4-20mA or input voltage below 0.25V for 1-5V.
2. ADER error occurs due to the A-D converter of the controller fails. Output 1 and Output 2 will perform the failure transfer (O1.ft & O2.ft) function as the controller enters failure mode.
3. Alarm Failure Transfer: An alarm failure transfer is activated as the controller enters failure mode. After that, the alarm output will transfer to the ON or OFF state which is determined by the set value of A1FT, A2FT, A3FT, and A4FT.




5.12 Soft-Start: The controller has soft start function to limit the control output on out1 and out2 for a programmable time SFT or up to a programmed threshold value SFTH. The first of two will terminate soft start function and the normal PID control begins. This function is useful for effects such as suppressing the heater output during equipment startup, or lightening the load.

Note: In Profile Version controllers If PFR is set to other than SP1 then the profile function will continue with the set parameter during power recovery. If PFR is set to SP1 then the profile will continue to run with soft start parameters during power recovery.

There are 5 parameters available for soft start function. They are as below.

1. SFt: Soft start time. If SFt \neq 0, then the Soft start function will be enabled. The SFt can be set in the form of Hour: Minute. The range can be set is 00:00 to 99:59.
2. SFL1: Soft Start output limit for output 1. It can be set from PL1L to PL1H.
3. SFL2: Soft Start output limit for output 2. It can be set from PL2L to PL2H.
4. SFtH: Soft start threshold value. The Soft start will be aborted when the process value is greater than or equal to SFtH.
5. SFtR: Soft start time. It will show the remaining time of soft start when it is running.

6. AUTO-TUNING: Auto-Tuning Operation Steps:

1. The system has been installed normally.
 2. Don't use zero value for PB or TI, otherwise the auto-tuning program will be disabled. The LOCK parameter should be set to NONE.
 3. Set the set point to a normal operating value or a lower value if overshooting beyond the normal process value will cause damage.
 4. Press and hold the  key until  appears on the upper display, then let go.
 5. Press and hold the  key for at least 5 seconds. The TUNE indicator will begin to flash, and the auto-tuning process has begun.
- NOTE: If the ramping function is used, it will be disabled once auto-tuning is started. The auto-tuning mode is disabled if either a failure mode or manual control mode occurs.

Auto-Tuning Error: If auto-tuning fails, an ATER  message will appear on the upper display in any of the following cases.

- ❖ If PB exceeds 9000 (9000 PU, 900.0°F or 500.0°C)
- ❖ If TI exceeds 1000 seconds
- ❖ If the set point is changed during the auto-tuning process

- ## 7. MANUAL CONTROL: To enable manual control, ensure the LOCK parameter is set to NONE. Press and hold for 6.2 seconds or until (Hand Control) appears on the display. Press and hold for 5 seconds or until the MANU indicator begins to flash. The lower display will show . The controller has now entered manual control mode. indicates the output control variable for output 1, and indicates the control variable for output 2. The user can use the up-down keys to adjust the percentage values for the heating or cooling output. This % value is based on the CYC1 and CYC2 settings, where the associated output will stay on for the % of time the CYC1 & CYC2 values are set for. The controller performs open loop control as long as it stays in manual control mode. The manual mode menu can be reached by pressing keys also. Exit Manual Control: Press the key will revert the controller to its normal display mode.

- ## 8. DATA COMMUNICATION: The controllers support RS-485 Modbus RTU protocol for data communication.

RS-485 Setup: Enters the setup menu. Set individual addresses for units connected to the same port. Set the Baud Rate (BAUD), Data Bit (DATA), Parity Bit (PARI) and Stop Bit (STOP) such that these values are accordant with PC setup conditions.

- ## 9. RETRANSMISSION: The controller can output (retransmit) PV or SP via its retransmission terminals RE+ and RE- provided that the retransmission option is ordered. A correct signal type should be selected for option board to meet the retransmission option installed. RELO and REHI are adjusted to specify the low scale and high scale values of retransmission.

- ## 10. HEATER CURRENT MONITORING: A current transformer (CT98-1) is required to measure the heater current. The CT input signal conditioner measures the heater current when the heater is powered (output 1 is on), and the current value will remain unchanged the heater is unpowered (output 1 is off). There are 1 or 2 CT inputs that can be connected to the controllers depending on the model. The CT1R & CT2R will indicate the heater current.

Heater break detection is enabled by enabling heater break detection setting HBEN. A Heater break alarm (H.bK) alerts the user when the current measured by CT1 in CT1R is lower than HB1T or CT2 in CT2R is lower than HB2T. When the current measured by CT1 in CT1R is higher than HB1T+HBHY and CT2 in CT2R is higher than HB2T+HBHY, the heater break alarm will be off. The Heater break alarm will be off when both CT values are in normal range. The Heater break alarm function will be enabled when OUT1 is in ON condition.

Heater short detection is enabled by enabling heater short detection setting HSEN. A Heater short alarm (H.St) alerts the user when the current measured by CT1 in CT1R is higher than HS1T or CT2 in CT2R is higher than HS2T. When the current measured by CT1 in CT1R is lower than HS1T-HSHY and CT2 in CT2R is lower than HS2T-HSHY, the heater short alarm will be off. The Heater short alarm will be off when both CT values are in normal range. The Heater short alarm function will be enabled when OUT1 is in OFF condition.

- ## 11. EVENT INPUT: There are 6, 2 or 1 Event Inputs that are available in this series of controllers depending on the size of the controller. Refer wiring section for wiring an event input. The Event input accepts a digital (on/off) type signal. One of the available functions can be chosen by using EIFN1 through EIFN6 contained in the setup menu. The same function cannot be set to more than one event input.

- ## 12. REMOTE SET POINT: The set point will change proportionally with respect to the input given in the Remote Set point input terminals. The Remote Set point function needs RMSP, RINL, RINH parameters to be set properly.

- ## 13. RAMP AND SOAK PROGRAM: The profiler option can be used in the application where the set point should be changed automatically with the time. It provides 1 program with 16 segment or 2 programs with each 8 segments or 4 programs with each 4 segments. Each segment has both ramp and soak function. PROF, RUN, RMPU, STAR, END, PFR, HBLO, HBHI, HBT, CYC parameters are used to configure the controller for ramp and soak programs. For more information of Profiler, please refer to full version user manual.


14. ERROR CODE:

Error Code	Display Symbol	Description & Reason	Corrective Action
4	ER04	Illegal setup values used: COOL is used for OUT2 when DIRT (cooling action) is used for OUT1, or when PID mode is not used for OUT1 (PB =0 and/or TI=0)	Check and correct setup values of OUT2, PB1, PB2, T11, T12 and OUT1. IF OUT2 is needed for cooling control, the controller should use PID mode (PB≠ 0 and TI≠0) and OUT1 should use reverse mode (heating action), otherwise, OUT2 cannot be used for cooling control.
10	ER10	Communication error: bad function code	Correct the communication software to meet the protocol requirements.
11	ER11	Communication error: register address out of range	Do not issue an over range address of register to the slave.
14	ER14	Communication error: attempt to write a read only data	Do not write a read only data or a protected data to the slave.
15	ER15	Communication error: write a value which is out of range to a register	Do not write an over range data to the slave register.
16	EIER	Event Input Error: Two or more event inputs are set to the same function	Do not set the same function in two or more Event Input Function parameters (E1FN through E6FN).
26	ATER	Auto-Tuning Error: Failed to perform auto-tuning function	<ol style="list-style-type: none"> 1. The PID values obtained after auto-tuning process are out of range, retry auto-tuning. 2. Do not change the set point value during auto-tuning process. 3. Use manual tuning instead of auto-tuning process. 4. Do not set a zero value for TI. 5. Do not set a zero value for PB. 6. Touch RESET key.
29	EEPR	EEPROM can't be written correctly	Return to factory for repair.
30	CJER	Cold junction compensation for Thermocouple malfunction	Return to factory for repair.
39	SBER	Input sensor break, or input current below 1mA if 4-20mA is used, or input voltage below 0.25V if 1-5V is used	Replace input sensor.
40	AADER	A to D converter or related component(s) malfunction	Return to factory for repair.

UMQOC621A SEP 2018

Page Left Intentionally Blank

State of California Proposition 65 Warning

 **WARNING Cancer and Reproductive Harm:** This warning is intended to address certain Prop 65 chemicals that may be found in Future Design Controls products. These products can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer, birth defects or other reproductive harm.


What is the state of California Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. For more information go to:

www.P65Warnings.ca.gov

The most recent list of chemicals known to the State of California can be seen at:

<https://oehha.ca.gov/media/downloads/proposition-65/p65list102618.pdf>

 **Proposition 65 Warning: Affected Future Design Control Products:**
This Warning applies to all existing and all future products offered by Future Design Controls.

Warranty

Future Design Controls C-Series products are warranted to be free from functional defects in materials and workmanship at the time the products leave Future Design Controls facilities and to conform at that time to the specifications set forth in the relevant Future Design Controls manual, sheet or sheets for a period of **three years** after delivery to the first purchaser for use.

There are no expressed or implied Warranties extending beyond the Warranties herein and above set forth.

Limitations

Future Design Controls provides no warranty or representations of any sort regarding the fitness of use or application of its products by the purchaser. Users are responsible for the selection, suitability of the products for their application or use of Future Design Controls products.

Future Design Controls shall not be liable for any damages or losses, whether direct, indirect, incidental, special, consequential or any other damages, costs or expenses excepting only the cost or expense of repair or replacement of Future Design Control products as described below.

Future Design Controls sole responsibility under the warranty, at Future Design Controls option, is limited to replacement or repair, free of charge, or refund of purchase price within the warranty period specified. This warranty does not apply to damage resulting from transportation, alteration, misuse or abuse.

Future Design Controls reserves the right to make changes without notification to purchaser to materials or processing that do not affect compliance with any applicable specifications.

Return Material Authorization

Contact Future Design Controls for Return Material Authorization number prior to returning any product to our facility.

Future Design Controls, Inc.
7524 West 98th Place
Bridgeview, IL 60455
www.futuredesigncontrols.com

Main Office Phone: 888-751-5444
Fax: 888-307-8014
email: csr@futuredesigncontrols.com

Technical Support
Phone: 866-342-5332
Email: support@futuredesigcontrols.com